

Hikvision bežični alarmni komplet instalacijske upute



Sadržaj

Preduvjeti	3
Procedura:	3
Osnovna podešavanja	4
Dodavanje bežičnog PIR detektora	6
Dodavanje magnetnog kontakta	7
Dodavanje tagova	8
Dodavanje particija	9
Dodavanje kamera	11
Dodavanje centrale na Hik Connect	12
Onemogućavanje funkcijske tipke na panelu	13
Podešavanje dojave	13
Dodatak A - Povezivanje na bežičnu mrežu	16
Dodatak B - Testiranje dometa	17

Preduvjeti

Naprije preporučamo provjeriti da li se sve komponente nalaze u kompletu. **DS-PWA32-NST** komplet se sastoji od:

- 1x alarmne centrale
- 1x PIR detektora
- 1x magnetni kontakt
- 5x tagova, model DS-PTS-MF
- Šarafi za MC, CP, PIR
- 1x ispravljač za centralu
- 1x nosač za detektor pokreta
- 1x punjiva baterija za alarmnu centralu

Nakon što smo se uvjerili da su sve komponente u paketu, potrebno je pristupiti inicijalizaciji i programiranju alarmnog sustava. U ovom dokumentu opisati ćemo programiranje putem web browsera.

NAPOMENA

Preporučujemo upgrade centrale na najnoviji firmwarea. U trenutnku pisanja ovog teksta to je bio firmware 1.0.4, dostupan na ovom <u>linku</u>.

Procedura:

1. Odšarafiti i maknuti poklopac sa stražnje strane centrale. Ukoniti poklopac za izlazak kablova. DIP switch staviti u STA mode.



2, Spojiti mrežni kabel, napajanje i bateriju. Vratiti poklopac kako bi se izbjegla greška tampera.

3. Na računalu uključiti SADP aplikaciju. Potrebno je centralu aktivirati kao što se radi i sa Hikvision kamerama ili snimačima. Dodijelite lozinku centrali (minimalno 8 znakova, brojke i slova) te odaberite želite li da uređaj bude na DHCP-u ili postavite statičku IP adresu.

(SADP										① _ □ ×
	Total numb	per of online devices: 1						E	xport Refresh	Activate the Dev	ice
	🛃 ID	▲ Device Type	Status	IPv4 Address	Port	Software Version	IPv4 Gateway	HTTP Port	Device Serial No.		
	✓ 001	DS-PWA32-HSR	Inactive	192.0.0.64	8000	V1.0.4build 1906	0.0.0.0	80	DS-PWA32-HSR201902	22AAV	
											Δ
											2
										>	
										The dev	ice is not activated.
										You can modi	v the network parameters after
										th	e device activation.
										_	Activate Now
										New Password:	
										Weak	
										Confirm Password:	•••••

4. Otvoriti browser i upisati IP adresu centrale. Ulogirati se podacima koje ste maloprije podesili:



Osnovna podešavanja

5. Pod **System > Device Information** promijenite ime centrale:

L User Management	Device Information About			
E System	Device Name	Alarmni sustav vikendica 📀		
Device Information	Device Model:	DS-PWA32-HSR		
System Options	Donio model.			
Security	Device Serial No:	DS-PWA32-HSR20190222AAWRQ00583762WU		
System Maintenance	Device Firmware Version:	V1.0.4 build 190629		
Log	Web Version:	V4 25 1 build 190625		
Date and Time		44.E5.1 Build 199925		
Network Camera				
Device Management		Save		
Partition Management				

6. Pod **System > Date and Time** odaberite vremensku zonu te upišite NTP server. Ukoliko centrala neće imati pristup internetu, odaberite **Manual Time Sync**:

1	User Management	Time Management DST Management				
—	System	Time Zone	(GMT+01:00) Amsterdam, Berlin, Rome, Paris -			
	Device Information	Time Synchronization				
	System Options					
	Security	Synchronization Mode	NTP Time Sync. Manual Time Sync			
	System Maintenance	Server Address	zg1.ntp.carnet.hr	⊘		
	Log	NTP Port No.	123			
	Date and Time]		
	Network Camera	Synchronization Interva	60	Minute(s)		
	Device Management					
	Partition Management		Save			
\$	Communication Parameters					
4	Video & Audio					

7. U istom izborniku, pod DST Management, omogućite i podesite DST:

Time Management	DST Management						
Enab	le DST						
DST	Bias	60 Minute(s)		-			
Start	Time	March -	Last	- Sunday	- 02	2 -	
End T	īme	October -	Last	- Sunday	- 02	2 -	
		Save					

8. Pod **Communication Parameters > Ethernet** možete promijeniti postavke žične mreže:

	11 11	Wired Network Settings	twork Settings				
-	User Management						
	System	DHCP					
	Device Management	IP Address	192.168.8.116				
	Partition Management	Outpat Mark					
÷	Communication Parameters	Subnet Mask	200.200.200.0				
	Ethernet	Gateway Address	192.168.8.1				
	Wi-Fi	MAC Address	58:03:fb:be:86:3b				
	Cellular Data Network	DNS1 Server Address	8.8.8.8				
	Alarm Receiving Center						
	Event Communications	DNS2 Server Address	8.8.4.4				
	Hik-Connect Registration	HTTP Port	80				
	Video Verification Events						
	EHome Registration						
	NAT		Save				
	FTP						

NAPOMENA

Ukoliko će uređaj biti na bežičnoj mreži, potrebno ga je dodati na bežičnu mrežu. Postupak je opisan u **Dodatku A**.

Dodavanje bežičnog PIR detektora

9. Otvorite detektor i maknute izolacijsku traku sa baterije. Detektor bi se trebao upaliti. Na alarmnoj centrali, pritisnite gumb sa strane. Trebali bi čuti glasovnu poruku **Add device**.

10. Na detektoru pritisnite LEARN gumb kako biste povezali uređaje:



11. Pustite gumb nakon nekoliko sekundi. Glas sa centrale bi vas trebao obavijestiti da je uređaj dodan pod Zonu 1.

12. Vratite poklopac kako biste izbjegli grešku tampera. Ponovo pritisnite gumb na centrali kako biste izašli iz moda dodavanja uređaja.

13. Natrag u web browseru, pod **Device Management > Zone**, trebali bi vidjeti da piše **Enrolled** pod **Enroll Wireless Detector** za prvu zonu:

1 User Management	Basic Setti	ngs						
🗎 System	Zone	Name	Туре	Stay Arming Bypass	Silent Alarm	Chime	Enroll Wireless Detector	Settings
Device Management	1	Wireless zone 1	Instant	Disable	Disable	Disable	Enrolled	÷
Zone	2	Wireless zone 2	Instant	Disable	Disable	Disable	Not enrolled	÷
Relay	3	Wireless zone 3	Instant	Disable	Disable	Disable	Not enrolled	÷
Siren	4	Wireless zone 4	Instant	Disable	Disable	Disable	Not enrolled	ŝ
Card Reader	5	Wireless zone 5	Instant	Disable	Disable	Disable	Not enrolled	ŝ
Partition Management	6	Wireless zone 6	Instant	Disable	Disable	Disable	Not enrolled	÷
B Communication Parameters	7	Wireless zone 7	Instant	Disable	Disable	Disable	Not enrolled	÷
🖞 Video & Audio	8	Wireless zone 8	Instant	Disable	Disable	Disable	Not enrolled	÷
s Maintenance	9	Wireless zone 9	Instant	Disable	Disable	Disable	Not enrolled	÷
M Status	10	Wireless zone 10	Instant	Disable	Disable	Disable	Not enrolled	ŝ

14. Pritisnite kotačić pod kolonom Settings za prvu zonu. Otvara se prozor s opcijama:

- Zone broj zone. Popunjeno automatski.
- **Name** upišite ime zone.

- **Tip zone** odaberite tip zone (Delay, Instant, Follow...). U našem primjeru odabrana je **Delayed** zona sa vremenom **Entry Delay 1**.
- Detector Type tip detektora. Popunjeno automatski.
- Stay Arming Bypass uključite ako želite da je zona bypassana (neaktivna) kada se sustav uključi putem Stay Arm modea.
- Chime uključite ako se želi da se zvonce čuje kada se zona otvori (zvuk dolazi sa centrale)
- Silent Alarm uključite ako želite da se alarm aktivira bez zvučnog ili vizualnog upozorenja.
- Enroll Wireless Detector ostavite uključeno.
- **Panel Video Channel No.** odabrati koja kamera je povezana sa ovim detektorom. Video sa te kamere će biti poslan na mobilnu aplikaciju u slučaju alarma. Dodavanje kamere ćemo objasniti u sljedećoj sekciji.
- **Disconnection Duration** vrijeme nakon kojeg će centrala proglasiti detektor neaktivnim u slučaju prekida komunikacije.

Cone Settings		
Zone	1	
Name	Prednja vrata	•
Туре	Delayed -	Entry Delay 1 -
Detector Type	Passive Infrared Detector +	
Stay Arming Bypass		
Chime		
Silent Alarm		
Enroll Wireless Detector		
Panel Video Channel No.	Not Link -	
Disconnection Duration	1	h
	ок	Cancel

Dodavanje magnetnog kontakta

15. Magnetni kontakt se dodaje na sličan način kao i detektor. Otvorite magnet i skinite izolacijsku traku. Uređaj bi se trebao upaliti.

16. Na alarmnoj centrali, pritisnite gumb sa strane kako bi aktivirali mod za dodavanje uređaja. Trebali bi čuti glasovnu poruku **Add device**. Na magnetnom kontaktu pritisnite LEARN gumb:



17. Pustite gumb nakon nekoliko sekundi. Glas sa centrale bi vas trebao obavijestiti da je uređaj dodan. Zatvorite uređaj kako bi izbjegli grešku tampera i prisnite ponovo gumb na centrali za izlazak iz moda dodavanja uređaja.

18. Natrag u web browseru, trebali bi vidjeti status **Enrolled** pod drugom zonom. Pritisnite kotačić sa strane i podesite parametre zone:

Zone Settings		×
Zone	2 Length Range:1-32	
Name	Prozor kuhinja	•
Туре	Instant -	
Detector Type	Door Magnetic Contact 🗸	
Stay Arming Bypass		
Chime		
Silent Alarm		
Enroll Wireless Detector		
Panel Video Channel No.	Not Link +	
Disconnection Duration	1	h
	ок	Cancel

Dodavanje tagova

19. Pod User Management > Card, odaberite Add:

1	L User Management		Card Management			
	User		+	- Add	🗂 Delete	
	Keyfob			No.	Card	Serial No.
	Card		-			
	System					
	Device Management					
	Partition Management					
÷	Communication Parameters					
<u>.</u>	Video & Audio					
ş	Maintenance					
~~	Status					

20. Prislonite tag kada čujete poruku sa centrala. Jedan beep znači da je upisivanje uspjelo:

Add Card			×
Card Information			
Enable			
Serial No.	2955780012		
Name	Antun	⊘	
Туре	Operation Card -		
Partition	Partition1 -		
Permission			
	Select All		
	Arming Permission		
	Disarming Permission		
		ОК	Cancel

- 21. Popunite sljedeće podatke:
 - Name ime korisnika
 - **Tip kartice** ukoliko odaberete **Patrol**, samo će se zabilježiti prislanjanje taga, odnosno taj tag neće služiti za uključivanje ili isključivanje sustava. Ostavite **Operation Card**.
 - **Partition** odaberite particiju za korisnika (defaultno su sve zone u particiji 1).
 - **Permissions** prava koja će korisnik imati za tu particiju.

22. Korisnik sad može uključiti i isključiti alarmni sustav pomoću tagova. Testirajte rad sustava.

Dodavanje particija

23. Od verzije firmwarea 1.0.4 moguće je koristiti do 4 particije na sustavu. Particija 1 je uključena po defaultu. Ako hoćemo npr. zonu broj 2 prebaciti u particiju broj 2, moramo napraviti sljedeće:

24. Pod Partition Management, maknuti kvačicu pored Zone2 kako bi maknuli zonu iz Particije 1:

Basic Settings Public	Partition Schedule & Time	r
Partition		Partition1 - Enable
Linked Zor	ie	Active Functions
		Zone1
		Zone2
		Zone3
		Zone4
		Zone5

25. U istom prozoru, pod Partition, odabrati **Partition2**. Uključiti kvačicu pored **Enable** kako bismo omogućili particiju. U popisu particija, uključiti kvačicu pored **Zone2** kako bismo smjestili zonu u tu particiju:

Basic Settings Public Partition Sc	chedule & Timer	
Partition	Partition2 - Enable	
Linked Zone	Active Functions	-
	Zone2	
	Zone3	
	Zone4	
	Zone5	

26. (opcionalno) Pod tabom **Schedule & Timer**, podesiti parametre particija za trajanje delay, automatsko uključivanje i isključivanje sustava, itd:

Basic Settings	Public Partition Schedule & Tim	er		
Pi	artition	Partitio	n2 -	
	Entry Delay 1	10		S
	Entry Delay 2	60		s
	Exit Delay	10		S
	Enable auto Arming			
		Time	00:00	
	Enable auto Disarm			
		Time	00:00	5
	Late to Disarm			
		Time	00:00	
	Weekend Exception			
Si	ren Delay Time (Peri	60		s
A	arm Duration	10		S 🔊

27. Napraviti korisnika koji će imati pravo uključivanja i isključivanja samo particije 2. Pod User

Management > Card dodati novog korisnika i omogućiti mu upravljenje Particije 2:

Partition	Partition2 -	
Permission		
	Select All	
	Arming Permission	
	Disarming Permission	

Dodavanje kamera

28. Moguće je dodati do dvije IP kamera na centralu za potrebe video verifikacije. Pod **System > Network Camera**. odaberite **Add**:

L User Management	Network Camera Management
🗂 System	+ Add 🗹 Edit 前 Delete
Device Information	Video Verification Chanel Network Camera IP
System Options	
Security	
System Maintenance	
Log	
Date and Time	
Network Camera	

29. Upišite IP adresu kamere i pristupne podatke:

Add Network Camera		×
Adding Trough	IP	Ŧ
IP Address	192.168.8.160	\bigcirc
Protocol Type	HIKVISION	-
Port No.	8000	
User Name	admin	⊘
Password		S
		OK Cancel

30. Nakon što smo kameru dodali, potrebno ju je pridružiti zoni. Odaberite **Device Management** > **Zone** i stisnite na kotačić pored zone kojoj želite pridružiti kameru. Pod **Panel Video Channel No**, odaberite broj kamere:

ne Settings			
Zone	2		
Name	Prozor kuhinja		
Туре	Instant	•	
Detector Type	Door Magnetic Contact	-	
Stay Arming Bypass			
Chime			
Silent Alarm			
Enroll Wireless Detector			
Panel Video Channel No.	1	-	
Disconnection Duration	1	h	
		ок	ancel

Dodavanje centrale na Hik Connect

31. Pod **Communication Parameters > Hik-Connect Registration**, provjerite da li je uređaj aktivan na Hik Connectu:

	Licar Management	Hik-Connect Registration Settings			
	Oser Management				
	System	 Register to Hik-Connect 			
	Device Management	Hik-Connect Connectio	Online		
	Partition Management				
8	Communication Parameters	Custom Server Address			
**		Server Address	dev.eu.hik-connect.com		
	Ethernet				
	Wi-Fi	Communication Mode	Wired Network & Wi-Fi Priority -		
	Cellular Data Network	Verification Code	·····		
	Alarm Receiving Center		The code should contain 6 to 12		
	Event Communications		characters (it is recommended to be more than & characters and the combination of		
	Hik-Connect Registration		numeric and letter).		
	Video Verification Events		Save		
	EHome Registration				
	NAT				
	FTP				

32. Dodajte centralu na Hik-Connect kao što dodajete kameru ili snimač - putem skeniranja QR koda na naljepnici ili upisivanjem serijskog broja uređaja. Trebali bi vidjeti alarmni sustav unutar aplikacije:



Onemogućavanje funkcijske tipke na panelu

33. Nakon što ste završili s programiranjem sustava, preporučuje se onemogućiti funkcijsku tipku na alarmnoj centrali. Pod **System Options**, omogućiti opciju **Disable Function Key**:

Liser Management	System Options Management Advanced Settings Fault Check
System	Wireless Supervision
Device Information	Forced Arming
System Options	1 oroca / aming
Security	System Faults
System Maintenance	Disable Function Key
Log	System Volume 1 Range (0 to 10)
Date and Time	
Network Camera	
Device Management	Save

Podešavanje dojave

34. Ukoliko je uređaj dodan na Hik-Connect, dojava će dolaziti na mobilnu aplikaciju. Ukoliko ste na centralu dodali i kameru, na mobitel će Vam stići i video snimka događaja u trajanju od 7 sekundi:



35. Dojavu je moguće vršiti i na mobitel putem glasovnog poziva ili SMS-a, do 8 brojeva telefona. Primjer konfiguracije (**Communication Parameters > Event Communications > Mobile Phone**):

iVMS-4200	Alarm Receiver Center	Cloud	Mobile Phone	
	Mobile Phone Index		1 ~]
	Mobile Phone Number		0916233900]
	Alarms and Tampers Life Safety Alarms			
	Maintenance and Faults			
	Panel Management Not SMS			
	Alarms and Tampers			
	Life Safety Alarms			
	Panel Management Not			

36. Sustav podržava i dojavu na dojavni centar, putem Ademco Contact ID ili SIA-DC-09 protokola. Primjer konfiguracije (Communication Parameters > Alarm Receiving Center):

Alarm Receiving Center				
Alarm Receiver Center	1			
Enable				
Protocol Type	ADM-CID -]		
Address Type	IP -			
Server Address				
Port No.	-			
Account Code	0			
Transmission Mode	TCP			
Retry Timeout Period	20	s		
Attempts	3			
Heartbeat Interval	10	s 🗹 Enable		
	Save			

37. Sustav je moguće uključivati ili isključivati putem SMS poruka. Primjer naredbi:

SMS remote control command: **"Command + Operate type + Operate Object"** Command: 00—Disarm, 01—Away arming, 02—Stay arming, 03—Clear alarm Operate type: 1—Partition operate Operate Object: 0—All Partition, 1—Partition 1, 2—Partition 2, 3—Partition 3, 4— Partition 4

Example: 01+1+1 means Partition 1 Away arming

Dodatak A - Povezivanje na bežičnu mrežu

Pod **Communication Parameters > WiFi**, odaberite bežičnu mrežu u popisu i pritisnite **Connect**:

Wi-Fi Access point WLAN					
Status of STA/AP Switch					
Switch Mode:	STA Mode				
Wi-Fi					
SSID Wi-Fi		8			
Wi-Fi Password					
Encryption Mode	WPA2-personal	-			
Network List					
	Name	Channel No.	Signal Strength	Encryption Mode	Operation
	mreza	3	100	WPA2-personal	Connect
	AirTies_Air4920_SDN7	1	42	WPA2-personal	Connect
	B.net_98782	1	42	WPA2-personal	Connect
Upišite lozinku za bežič	nu mrežu:				
Connect mreza				×	
SSID Wi-Fi	mreza				
Wi-Fi Password	•••••		I		
	Conne	ct	Cancel		
	Conne		ouncer		

Ukoliko je povezivanje uspjelo, pod **Communication Parameters > WiFi** odaberite tab **WLAN**. Trebali bi vidjeti mrežne podatke:

L User Management	Wi-Fi Access point WLAN	
System	DHCP:	
Device Management	IP Address	192.168.8.146
Partition Management	Subnet Mask	255.255.255.0
Communication Parameters	Gateway Address	192.168.8.1
Ethernet Wi-Fi	MAC Address	00:95:69:fe:1c:c8
Cellular Data Network	DNS1 Server Address	192 168 8 1
Alarm Receiving Center	DNR2 Server Address	
Event Communications	DING2 GEIVEI AUGIESS	
Hik-Connect Registration		0
		Save

Ukoliko želite, sada možete isključiti mrežni kabal.

NAPOMENA

Nije preporučeno da uređaj bude istodobno i na bežičnoj mreži i žičnoj mreži.

Dodatak B - Testiranje dometa

Moguće je testirati jačinu RF signala kako bi bili sigurni da će centrala i detektori uredno komunicirati. Dva puta brzo pritisnite funkcijsku tipku na panelu i sustav će ući u *query* mod. Ukoliko je signal dovoljno jak, LEDica na detektoru će svijetliti žutozeleno.

Da bi napustili query mod, još jednom pritisnite funkcijsku tipku.

Jačinu signala možemo vidjeti i kroz web sučelje. Odaberite **Status > Zone**:

	Licor Management	Zone Status					
	System						C Refresh
	Device Management	Zone	Name	Status	Alarm Status	Detector Battery Capacity	Signal Strength
	Partition Management	1	Prednja vrata	Disarm	Normal	Normal	161(Strong)
÷	Communication Parameters	2	Prozor kuhinja	Disarm	Normal	Normal	161(Strong)
<u></u> .	Video & Audio	3	Wireless zone 3	Not Linked	Normal	Invalid	0(Invalid)
J.	Maintenance	4	Wireless zone 4	Not Linked	Normal	Invalid	0(Invalid)
∿~	Status	5	Wireless zone 5	Not Linked	Normal	Invalid	0(Invalid)
	Zone	6	Wireless zone 6	Not Linked	Normal	Invalid	0(Invalid)
	Relay	7	Wireless zone 7	Not Linked	Normal	Invalid	0(Invalid)