

# Podešavanje Hikvision modularnih portafonskih jedinica



# Sadržaj

Uvod	4
Podešavanje vanjske jedinice	4
Aktivacija uređaja	4
Programiranje vanjske jedinice	7
Adresiranje dodatnih modula	15
Podešavanje unutarnje jedinice	16
Aktivacija uređaja	16
Programiranje unutarnje jedinice	16
Alarmni ulazi	19
Dodavanje IP kamera	20



# Uvod

U ovim uputama su korišteni Hikvision software **SADP tool**, **IVMS v3.1.1.11**, vanjska modularna dvožilna IP jedinica **DS-KD8003-IME2** i unutarnja modularna dvožilna IP jedinica **DS-KH6320-WTE2**. Konfiguracija je jednaka i za modularni PoE sustav (vanjska jedinica **DS-KD8003-IME1/M**, unutarnje jedinice **DS-KH6320-WTE1**, **DS-KH8350-WTE1**, **DS-KH8520-WTE1**).

# Podešavanje vanjske jedinice

### Aktivacija uređaja

Pomoću SADP toola pronađete te aktivirate uređaj:

ID	Device Type	Status		Port	Enhanced SDK Service Port	Software Version	IPv4 Gateway	HT
022	DS-KD8003-IME2	Inactive	192.0.0.65	8000	N/A	V2.0.6build 1906	192.0.0.1	80
			Activate the Device					
			Activate the Device					
				-				
				2				
			The device	e is not act	ivated.			
			You can modify the dev	network param ice activation.	eters after the			
			A	activate Now –				
			New Password:					
				2				
			Confirm Password:					
				Activate				



Lozinka uređaja mora imati minimalno 8 znakova te se preporuča kombinacija malih, velikih slova i brojeva radi veće sigurnosti uređaja. Defaultni username je admin.

Defaultna IP adresa uređaja je 192.0.0.65 koju nakon aktivacije možete promjeniti na dva načina:

1. U SADP toolu se odabere uređaj i upišu novi podaci:

Enable DHCP	
Enable Hik-Connect	
Device Serial No.:	DS-KD8003-IME20120190924RRD
IP Address:	192.0.0.65
Port:	8000
Subnet Mask:	255.255.255.0
Gateway:	192.0.0.1
IPv6 Address:	::
IPv6 Gateway:	:
IPv6 Prefix Length:	0
HTTP Port:	80
	ity Verification
Admin Password	
Aunin 1233W010.	
	Modify

Forgot Password

2. U iVMS 4200 odaberete uređaj kojem želite promijeniti adresu te klikom na **Modify Netinfo** dobijete prozor u kojem mijenjate IP adresu i ostale parametre:

192.0.0.65	DS-KD8003-IME2	V2.0.6build 190604	Active	8000	¢, 2
					Modify Netinfo

UNRY-COOZ A	UTC SIG	) MA URN	TIZA JOST	CIJ	JA
Set Network Parameters					
DeviceInformation					
MACAddress	bc-ba-c2-86-a6-f				
SoftwareVersion	V2.0.6build 1906	04			
DeviceSerialNo	DS-KD8003-IME2	0120190924RRD6	56424785CVLU		
NetworkInformation					
IPSettings	🗌 DHCP				
ServerPort	8000				
IPv4Settings	✓ SavelPv4Set	tings			
IPAddress	192.0.0.65				
SubnetMaskAddress	255.255.255.0				
Gateway	192.0.0.1				
Password					
	ок	UndoMerge			

Nakon izmjene adrese uređaja potvrdite izmjene klikom na **OK**. Prilikom izmjene adrese pripazite na adresu vlastitog uređaja sa kojeg radite korekcije da ne bi izgubili vezu sa uređajem.

Ukoliko ste završili promjenu adresu možete dodati uređaj u iVMS software da bi počeli sa samim programiranjem uređaja. Za programiranje preporučujemo najnoviju verziju iVMS 4200, dostupnu <u>ovdje</u>.

Odabirom uređaja i klikom na **Add** pojavljuje se novo polje u koje upisujete naziv uređaja te se uređaj prebacuje u popis dodanih uređaja u softwareu:

192.0.0.65	DS-KD8003-IME2	V2.0.6build 1	90604	Active	8000	N/A
			Activate	Add		Close

AU SKCURES YOUR WORLD	TOMATIZACIJA IGURNOST
Add	×
Name	
IP Address	192.0.0.65
Port	8000
User Name	admin
Password	••••••• I
Synchronize Time	
Import to Group	<b>a</b>
	Set the device name as the group name and add all the channels connected to the device to the group.
	Add

Nakon uspješnog dodavanja uređaja spremni ste za programiranje istoga. Prije samo programiranja preporučujemo upgrade firmwarea na zadnji dostupni na ovom <u>linku</u>.

#### Programiranje vanjske jedinice

Prva stavka programiranja je vrijeme. Osim što jedinicu stavljate u GMT+1 vremensku zonu poželjno je uključiti NTP (ukoliko će jedinica imati pristup internetu) te DST (računanje ljetnog/zimskog) vremena.

U našem slučaju je korišten zagrebački CARNET NTP server:

Remote Configuration								
🝷 🊱 System	Configuring the Time S	ettings (e.g., N	ITP)					
🏶 Device Information								
🏶 General	Time Zone							
🏶 Time	Select Time Zone:	(GMT+01:00) Ar	nsterdam	, Berlin, Brus	sels, 🔻			
🏶 System Maintenance	🗹 Enable NTP							
🏶 User		zg1.ntp.carnet.h	r	1				
🕨 🊱 Intercom	NTP Port:	123						
🕨 🚱 Network	Sync Interval:	1440		Minute(s)				
🕨 🚱 Video Display	Enable DST							
🕨 🍖 CCD	Start Time:	March 🔻	Last W	/eek 🔻	Sun		: 00	
	End Time:	October 🔻	Last W	/eek 🔻	Sun		: 00	
	DST Bias:	60 min 🔹						
	SDK Synchronization							
	Synchronization							
								Save

Ukoliko Vam ne odgovara da jezik vanjske jedinice bude na engleskom jeziku moguće je promijeniti jezik na hrvatski pod **System Maintenance > Language** (promjena zahtjeva reboot jedinice):



Rem	ote Configuration		
- 🌚	System	System Maintenance	
	Device Information		
	🏶 General	System Management	
	🏶 Time		Reboot
	🏶 System Maintenance		Restore Default Settings Restore All
	🏶 User		Import Configuration File Export Configuration File
+ 😪	Intercom	Remote Upgrade	
<u>ه</u>	Network	Select Type:	e: Controller Upgra 🔻
<del>ا</del> ه	Video Display		
۱ <b></b>	CCD	Select File:	e: ••• Upgrade
		Progress	51
		Language	
			Croatian Save
			Turkish
			Vietnamese
			Hungarian
			Dutch
			Romanian
			Czech Republic
			Bulgarian
			Greek
			Croatian
			Serbian

**Intercom > ID Configuration** postavke **ne trebate** mijenjati ako se radi o jedinoj vanjskoj jedinici u sustavu. Također ih ne morate mijenjati ni ako imate više vanjskih jedinica u sustavu, ukoliko one rade neovisno.

Configuring the Room	1 Numbers
Device No. Configuration	
Device Type:	Door Station 💌
Project No.:	1
Community No.:	1
Building No.:	1
Floor No.:	1
No.:	0
	Save
	Configuring the Room Device No. Configuration Device Type: Project No.: Community No.: Building No.: Floor No.: No.:



Ukoliko na objektu imate dvije (ili više) vanjske jedinice za koje želite da rade identično, jednu jedinicu morate proglasiti Master jedinicom, a ostale Slave. To se radi mijenjanjem **No.** parametra – za Master ostaje 0, prva Slave jedinica je 1, druga 2, treća 3, itd.... Slave jedinice mogu imati broj sobe od 1 do 99. **Najveći broj Slave jedinica koji može biti u sustavu je 8.** 

Promjenom No. i klikom na Save vanjska jedinica postaje Slave te ta promjena zahtjeva reboot uređaja.



Zatim podešavate maksimalno vrijeme trajanja poziva te vrijeme poruke koje ostavljate na vanjskoj jedinici. Prva stavka je vrijeme razgovora - od 90 do 120 sekundi. Druga stavka je vrijeme poruke koju možete ostaviti na vanjskoj jedinici. Vrijeme koje možete odabrati je od 30 do 60 sekundi:

Remote Configuration			
🝷 🚱 System	Configuring the Time	Parameters	
🏶 Device Information			
🎲 General	Time Parameters		
🏶 Time	Device Type:		
😻 System Maintenance	Max. Speaking Duration:	90	s
🏶 User	Max. Message Duration	30	s
🝷 🊱 Intercom			
🗱 ID Configuration			
🌼 Time Parameters			

Sljedeći izbornik je postavka šifri za otvaranje brave na vanjskoj jedinici ukoliko koristite modul tipkovnice **DS-KD-KP**. Do tri šifre je moguće dodijeliti vanjskoj jedinici. Upisivanjem jedne od ove tri šifre aktivirati će se relej na koji je spojena brava. Odaberite i potvrdite šifru:



Nakon unosa šifri za otvaranje brave na vratima podešavate vrijeme otvorenosti brave. Vrijeme koje možete podesiti je od 6 sec do 255 sec. Vrijeme možete podesiti i za drugu bravu, ukoliko je imate. Klikom na padajući izbornik pod **Door No.** birate **2**.

Remote Configuration	Configuring the Door and Ladder Parameters
🝷 🊱 System	
🏶 Device Information	Access Control
🏶 General	Upload Alarm for Not-Closed Door
🏶 Time	Door No.: 1
🏶 System Maintenance	Door-unlocked Duration: 15 s
🏶 User	Door Name:
🝷 🊱 Intercom	Encrypt Card
🏶 ID Configuration	Save
🏶 Time Parameters	
🏶 Permission Password	
🏶 Access and Elevator Control	

Vanjska jedinica na sebi ima dva relejna izlaza za elekroprihvatnike. Prvi izlaz je programski po defaultu uključen. U slučaju da želite kontrolirati dvije brave morate uključiti drugi izlaz. Klikom na padajući izbornik birate **DOOR2** te pod **Output** birate **Electric lock**:



*	Device Information			\$	Device Information	IQ Input		
*	General				General			
٠	Time	IO Input No:	Al1 -	0	Time	IO Input No:	Al1	
*	System Maintenance	Input:	Door Status 🔹	\$	System Maintenance	Input:	Door Status	
٠	User	IO Output		4	User	IO Output		
🝷 🎲 Ini	tercom	IO Output No.		- 😪 li	ntercom	IO Output No:	DOOR2	Ţ
٠	ID Configuration			4	ID Configuration			
		Output:	DOOR1			Output:	Disable	
12	lime Parameters		DOOR2		Time Parameters		Disable	
*	Access and Elevator Control			4	Access and Elevator Control		Electric Lock	
*	IO Input/Output			0	IO Input/Output			<b></b>

Ako imate potrebe smanjiti/pojačati zvuk poziva na vanjskoj jedinici ili podesiti glasnoću mikrofona, pod **Volume Input/Output** birate željenu razinu zvuka:

Remote Configuration	
🝷 🍖 System	Configuring the Volume Input or Ouput
🏶 Device Information	
🏶 General	Volume Input
🏶 Time	Volume: ————————————————————————————————————
🏶 System Maintenance	Values Output
🏶 User	
🝷 🍖 Intercom	Volume: 6
🏶 ID Configuration	Talk Volume
🏶 Time Parameters	Talk Volume: 6
🏶 Access and Elevator Control	Save
🏶 10 Input/Output	
🏶 Volume Input/Output	

Pozivna tipka na vanjskoj jedinici po defaultu zove unutarnju jedinicu kojoj je dodijeljen broj sobe 1 (opisivanje dodjele brojeva soba unutarnjim jedinicama je opisano u nastavku).

Pod **Dial** možete promijeniti broj sobe ukoliko vam ne odgovara ili postaviti opciju **Call Center** koja zove npr. recepciju na kojoj je instaliran software IVMS:



Motion detection po defaultu nije uključen. Nakon uključenja opcije otkrivanja pokreta izaberete polje detekcije te osjetljivost kadra. Opcija **Notify Surveillance Center** vam omogućuje dojavu otkrivanja kretnji na mobilnu aplikaciju ili software IVMS:



U slučaju da koristite neke od dodatnih modula (tipkovnica, pozivne tipke...), pod **Sub Module** menijem ih možete konfigurirati. Važno je napomenuti da svi moduli moraju biti adresirani, što je objašnjeno u nastavku dokumenta. Na slici dolje vidimo da su na vanjsku jedinici spojena dva modula – tipkovnica i dodatne pozivne tipke:



Modul tipkovnice smo konfigurirali kad smo dodijelili šifru za otvaranje vrata. Da bi konfigurirali modul sa pozivnim tipkama, kliknite na **Settings** ikonu te birate koja tipka će pozivati koji stan (odnosno broj sobe unutarnje jedinice):

Remote Configuration					
🝷 🚱 System	Config	guring Sub Module I	nformation		
🏶 Device Information					
🌸 General	Module	Add Module Type	Module Status	Module Version	Settings
🏶 Time	1	Keypad Module	Online	V1.0.0d190522	2
🏶 System Maintenance	2	Nametag Module	Online		R
🏶 User		Cont	figuration		~
🝷 🍖 Intercom		Key number	Room No.		
🏶 ID Configuration			2		
🌸 Time Parameters					
🏶 Access and Elevator Control		3	4		
🏶 10 Input/Output			6		
🔅 Volume Input/Output					
🏶 Dial		Save	Cancel		
🏶 Motion Detection					
🔅 Intercom Protocol					
🏶 Sub Module					



Pod **Local network configuration** upisujete željene mrežne postavke (IP adresu, subnet masku te gateway):

Remote Configuration		
🕨 🍖 System	Configuring the Local Network Para	meters
🕨 🎡 Intercom		
🝷 🎡 Network	Local Network Configuration	
🏶 Local Network Configuration	Local IP Address:	192.0.0.66
Linked Network Configuration	IP Address Subnet Mask:	255.255.255.0
🏶 FTP Settings	Default Gateway:	192.0.0.1
Advanced Settings	Port:	8000
	HTTP Port:	80
Video Display		Save
🕨 🚱 CCD		

**Linked Network Configuration** meni **preskačete** ako imate jednu vanjsku jedinicu u sustavu ili ako su jedinice neovisne.

Ako to nije slučaj i ukoliko imate dvije (ili više) vanjske jedinice i želite ih ujediniti u jedan sustav tako da obje vanjske jedinice pozivaju iste unutarnje, pod **Linked Network Configuration** je potrebno konfigurirati sljedeće:

- Za Master jedinicu, nije potrebno ništa podešavati
- Za Slave jedinice ovdje odredimo (Main) Door Station IP Address adresu Master vanjske jedinice





#### Adresiranje dodatnih modula

Jako je bitno da adresirate module prije puštanja u rad. Na poleđini svih modula ima crna guma koja se skida i preko koje se dolazi do DIP switcheva za adresiranje modula.



Switchevi od 1 do 4 su rezervirani za dodjeljivanje adresa. Kako je maksimalan broj dodanih modula 8 tako je maksimalna adresa koju možete dodijeliti module isto 8.

Adresiranje jumpera je binarno. Bitno je napomenuti da kod programiranja modula krećete sa adresom 1. Znači prvi modul adresa 1, drugi modul adresa 2... Glavna vanjska jedinica nema adresiranja i ne zauzima adrese. Sljedeća tablica prikazuje kako treba podesiti jumpere za svaku adresu:

Sub Module Address	1	2	3	4	.5	6	7	8
Digit 1	ON	OFF	ON	OFF	ON	OFF	ON	OFF
Digit 2	OFF	ON	ON	OFF	OFF	ON	ON	OFF
Digit 3	OFF	OFF	OFF	ON	ON	ON	ON	OFF
Digit 4	OFF	ON						



# Podešavanje unutarnje jedinice

## Aktivacija uređaja

Defaultna IP adresa uređaja je 192.0.0.64 koju nakon aktivacije možete promijeniti na isti način kao što se mijenja i za unutarnju (opisano na početku dokumenta).

Ukoliko ste završili promjenu adresu možete dodati uređaj u IVMS software da bi počeli sa samim programiranjem uređaja.

### Programiranje unutarnje jedinice

Nakon uspješnog dodavanja uređaja spremni ste za programiranje. Važno je napomenuti da je programiranje moguće samo putem iVMS softvera.

Prva stavka programiranja je vrijeme. Za razliku od konfiguracije unutarnje jedinice ljetno/zimsko računanje vremena nije moguće programirati. Moguće je odrediti vremensku zonu i NTP (u slučaju da vam uređaj ide na Internet).

U našem slučaju je korišten zagrebački CARNET-ov NTP server.

Remote Configuration				×
👻 🚱 System	Configuring the Time S	ettings (e.g., NTP)		
🏶 Device Information				
🏶 General	Time Zone			
🏶 Time	Select Time Zone: (	(GMT+01:00) Amsterdam,	Berlin, Brussels, 🔻	
🏶 System Maintenance	Enable NTP			
🏶 User	Server Address:	zg1.ntp.carnet.hr		
🏶 RS485	NTP Port:	123		
🕨 🎲 Intercom	Sync Interval:		Minute(s)	
🕨 鐍 Network	SDK Synchronization			
	Synchronization			
				Save

Ukoliko Vam ne odgovara da govor vanjske jedinice bude na engleskom jeziku moguće je promijeniti jezik na hrvatski. Pod **System Maintenance > Language** klikom na padajući izbornik imate širok izbor jezika:



Ako ne vidite odgovarajući jezik, potrebno je podići firmware sa ovog linka.

Postavke pod Intercom > ID Configuration ne trebate mijenjati ako se radi o jedinoj unutarnjoj jedinicu u sustavu. Također ih ne morate mijenjati ni ako imate više unutarnjih jedinica u sustavu, ukoliko one rade neovisno. Potrebno je samo provjeriti da li broj sobe odgovara broju sobe koja zove vanjska jedinica (defaultno 1).

Remote Configuration		
🝷 🍖 System	Configuring the Room	n Numbers
🏶 Device Information		
🏶 General	Device No. Configuration	l i i i i i i i i i i i i i i i i i i i
🏶 Time	Device Type:	Indoor Station 🔻
🏶 System Maintenance	Room No.:	
🏶 User	Floor No.:	1
🏶 RS485		Save
🝷 🊱 Intercom		
🏶 ID Configuration		

Ako želite da poziv sa vanjske jedinice istovremeno dolazi na dvije (ili više) unutarnje jedinice, jednu unutarnju jedinicu morate postaviti kao Master, drugu kao Slave. Za Master pod **Device Type** ostaviti **Indoor Station**, za Slave postaviti **Station Extension** i broj 1 za prvu Slave jedinicu, 2 za drugu, itd. **Maksimalno 5 unutarnjih jedinica možete postaviti kao ekstenziju.** 



ote Configuration

😪 Syste

🌸 Device Information			🏶 Device Information	
🏶 General	Device No. Configuration		🌞 General	Device No. Configuration
🏶 Time	Device Type:	Indoor Station	🏶 Time	Device Type: Station Extension 🔻
🏶 System Maintenance	Room No.:	Indoor Station	🏶 System Maintenance	No.: 1 I
🏶 User	Floor No.:	Station Extension	🏶 User	Save
🏶 RS485		Save	🏶 RS485	
🝷 🚳 Intercom			🝷 🍖 Intercom	
🌼 ID Configuration			🌼 ID Configuration	

Prilikom spremanja postavki uređaj je potrebno resetirati pa je idući korak potvrda samog reseta.

Da bi postavili vrijeme poziva, vrijeme pregleda uživo na vanjsku kamera te vrijeme nakon kojeg će se poziv proslijediti na Hik-Connect aplikaciju, potrebno je otići u **Intercom > Time parameters**.

Remote Configuration					
🝷 🍖 System	Configuring the Time Parameters				
🏶 Device Information					
🏶 General	Time Parameters				
🏶 Time	Device Type:				
🏶 System Maintenance	Max. Ring Duration:	30	s		
🌞 User	Max. Live View Duration:	30	s		
	Call Forwarding Time:	0	s		
🔅 RS485		Save			
🝷 🚱 Intercom					
🏶 ID Configuration					
🌸 Time Parameters					

Pod **Max. Ring Duration** podešavate vrijeme trajanja samog poziva odnosno zvonjave sa vanjske jedinice (prije javljanja korisnika). Vrijeme koje možete podesiti je od 30 do 60 sec.

**Max. Live View Duration** označava vrijeme koje vam dozvoljava da pozovete pogled sa kamere na vanjskoj jedinici. Vrijeme koje možete podesiti je od 10 sec do 60 sec.

**Call Forwarding Time** označava vrijeme nakon kojeg će poziv sa unutarnje jedinice biti proslijeđen na Hik Connect mobilnu aplikaciju. Vrijeme možete postaviti od 0 sec do 20 sec.



Svakoj unutarnjoj jedinici možete dodati lozinku koju ćete koristiti za otključavanje ulaznih vrata (ukoliko se koristi modul sa tipkovnicom na vanjskoj jedinici):

Permission Password			
Password Type:	Unlocking Password		
New Password:	Admin Password		
Confirm Password:	Arming/disarming Pass		
	Unlocking Password		
	Duress Code		

## Alarmni ulazi

Svaka unutarnja jedinica na sebe može primiti 8 zona/inputa. Imate širok izbor elemenata koje možete spojiti i iskonfigurirati na unutarnju jedinicu (magnetni kontakt, dimni senzor, PIR...):

Remote Configuration				Smoke Detector
🔻 🏟 System	Configuring the Zone	Parameters		
🏶 Device Information	Zono Alerma			Emergency Switch
🏶 General				
🏶 Time	Zone No.:	1	-	Door Magnetic Contactor
🏶 System Maintenance	Zone Type:	Smoke Detector	-	
🏶 User	Alarm Type:	24-hour Alarm	•	Smoke Detector
🏶 RS485	NO/NC:	Remain Open	-	Active Infrared Detector
🝷 🊱 Intercom	Entering Delay:		s	Active initiated Detector
🌼 ID Configuration	Exiting Delay		s	Passive Infrared Detector
🏶 Time Parameters	Action Settings			·
🏶 Permission Password				Combustible Gas Detector
🏶 Zone Alarm	Trigger 1			
🏶 IP Camera Information	Trigger 2			DoorBell Switch
<b>1</b>				

Svaku zonu možete iskonfigurirati kao door bell ( zvono).

Nakon odabira zone na koju želite spojiti uređaj važno je odabrati alarmni tip. Npr. PIR može biti Instant zona, 24h zona ili zona sa odgodom. Bitno je i odabrati kakav kontakt će unutarnja jedinica davati, NO ili NC (ovisno o elementu kojeg koristite):

Zone No.:	1	-	Zone No.:	1	•
Zone Type:	Active Infrared Det	-	Zone Type:	Active Infrared Det	•
Alarm Type:	Instant Alarm		Alarm Type:	Instant Alarm	•
NO/NC:	Instant Alarm		NO/NC:	Remain Open	-
Entering Delay:	24-hour Alarm	s	Entering Delay:	Remain Open	
Exiting Delay	Delayed Alarm	s	Exiting Delay	Remain Closed	



Za kraj birate koji relejni izlaz/output želite da odradi. Na taj isti output (moguća su dva) možete spojiti npr. bljeskalice, sirene...:



# Dodavanje IP kamera

Unutarnjoj jedinici možete dodati IP kamere koje već imate u sustavu. Odlaskom pod **IP Camera Information** i klikom na **Add** otvara se prozor u kojeg upisujete informacije o kameri.

		Edit IP Camera		Camera	
				Device Type	
Remote Configuration				Getting Stream Mode	
🝷 🈘 System	IP Camera Information			Device Name	Skladiste ispred
🎲 Device Information					
🏶 General	IP Camera Information			IP Address	192.168.2.178
🏶 Time	Add Edit	Delete Export	Import	Port No.	554
🏶 System Maintenance	Index Device Name	Getting Stream URL	Manufacturer Protocol	User Name	admin
🏶 User	1 Prijem	Direct	HIK Protocol	Password	
🏶 RS485	2 Skladiste ispred	Direct	HIK Protocol	1 8350010	
🏶 Security	3 Skladiste unutra 1	Direct	HIK Protocol	Channel No.	
🝷 🎡 Intercom	4 Skladiste unutra 2	Direct	HIK Protocol	Manufacturer Protocol	HIK Protocol 🔹
🏶 ID Configuration					
🏶 Time Parameters					
🏶 Permission Password	•				
🏶 Zone Alarm					OK Cancel
🌼 IP Camera Information					Cancel

Glasnoću dolaznog poziva, odlaznog poziva i razgovora podešavate u Volume Input/Output:



Ukoliko imate potrebe za okidanjem releja po dolaznom pozivu potrebno je označiti **Trigger 1** ili **Trigger 2** (ovisno koji relejni izlaz želite da aktivira poziv tj. javljanje na poziv):



Trajanje odrade releja konfigurirate pod **Relay**. Prvom i drugom izlazu određujete vrijeme odrade klikom na ikonu **2**.



# AUTOMATIZACIJA I SIGURNOST

🔹 🚱 System	Configuring F	Relay Parameters				
🔅 Device Information						
🏶 General	Name	Output Delay(s) Settings				
🏶 Time	COM1	1	Ø			
🏶 System Maintenance	COM2	1	Z			
🏶 User						
🏶 RS485						
🝷 🌀 Intercom						
🏶 ID Configuration						
🏶 Time Parameters				Trigger Para	meters Setting	gs
Permission Password		▶		- •		
🏶 Zone Alarm				Trigger:		
🏶 IP Camera Information				Name	COMI	
🏶 Volume Input/Output				Nume.		
🏶 Ring Import				Alarm Output Active Ti	1	
🏶 Deploy Info						
🔅 Intercom Protocol						
🗱 Incoming Call Linkage				Convito	Sava	Cancel
🏶 Relay				copy to	Save	Cancel

Mrežne postavke konfigurirate pod **Network -> Local Network Configuration**. Upisujete IP adresu, subnet masku, gateway te portove:

Remote Configuration			
🕨 🍖 System	Configuring the Local Network Parameters		
🕨 🍖 Intercom			
🝷 🎡 Network	Local Network Configuration		
🍀 Local Network Configuration	Local IP Address:	192.168.2.131	
🏶 Linked Network Configuration	IP Address Subnet Mask:	255.255.255.0	
🏶 Advanced Settings	Default Gateway:	192.168.2.131	
🏶 Hik-Connect	Port:	8000	
• • • • • • • • • • • • • • • • • • • •	HTTP Port:	80	
		Save	

Pod Linked Network Configuration > (Main) Door Station IP Address upisujete adresu vanjske jedinice sa kojom povezujete unutarnju jedinicu:

Remote Configuration				
🕨 🊱 System	Configuring the Network and Sip Parameters			
🕨 🊱 Intercom				
🝷 🍖 Network	Linked Network Configuration			
🏶 Local Network Configuration	Device Type:			
🌼 Linked Network Configuration	Master Station IP Address:	0.0.0.0		
🤲 Advanced Settinger	(Main) Door Station IP Address:	192.168.2.134		
Advanced Settings	SIP Server IP Address:	0.0.0.0		
🏶 Hik-Connect	Security Control Panel IP Address:	0.0.0.0		
	Security Control Panel Port No.:			
	Doorphone IP Address:	0.0.0.0		
	Main Door Station Type:	Main Door Station 🝷		
		Save		

U slučaju da vam unutarnja jedinica služi kao ekstenzija drugoj unutarnjoj jedinici, pod **Linked Network Configuration** upisujete IP adresu Master unutarnje jedinice:



Bitna stavka za mrežne postavke jedinice je DNS adresa. Da bi jedinica uspješno mogla raditi na Hik Connectu morate upisati DNS adresu. Upisana adresa 8.8.8.8 je Google DNS server:



Unutarnja jedinica ima mogućnost povezivanja sa Hik Connect aplikacijom. Ukoliko ste prethodno unijeli važeće mrežne postavke nakon omogućavanja Hik Connecta uređaj će biti moguće dodati u aplikaciju:

