

Podesavanje snimanja videonadzora prilikom paljenja/gašenja alarmnog sustava

Potrebno je namjestiti snimanje kamera po alarmu(događaju alarma).



AUTOMATIZACIJA I SIGURNOST

The screenshot shows the 'Maintenance and Management' window in IVMS-4200. The 'Device' table is visible with the following data:

Name	Connection T...	Network Param...	Device Type	Serial No.	Security Level	Resource Us...	Firmware Upgrade	Operation
test	IP/Domain	192.168.2.137/8000	Encoding De...	DS-7608NI-ID/8P0820170630...	Weak	Online	No available version	[Basic Settings Icon]

A blue arrow points to the 'Basic Settings' icon in the 'Operation' column of the first row.



The screenshot shows the 'Configuration' window with the 'Record Schedule' tab selected. The 'Camera' dropdown is set to '[D3] Camera 01'. The 'Enable' checkbox is checked. The 'Alarm' event is selected in the dropdown menu. The recording schedule is shown as a grid with red bars indicating recording is active for all days of the week (Mon-Sun) from 0 to 24 hours. A 'Save' button is visible at the bottom.

Legend for recording events:

- Blue: Continuous
- Green: Motion
- Red: Alarm
- Yellow: Motion | A
- Light Blue: Motion & A
- Purple: Event
- Cyan: POS

Nakon podešavanja snimanja po alarmnom događaju potrebno je sa alarmne centrale povezati PGM na input 1 na video snimacu te u "EVENT"/"BASIC EVENT" aktivirati input te odabrati kontakt (u našem slučaju NO).

U opciji "Alarm input No." izaberete željeni input sa video snimaca (input na kojeg je spojen izlaz sa alarmne centrale), uključite opciju " Enable alarm input Handling".

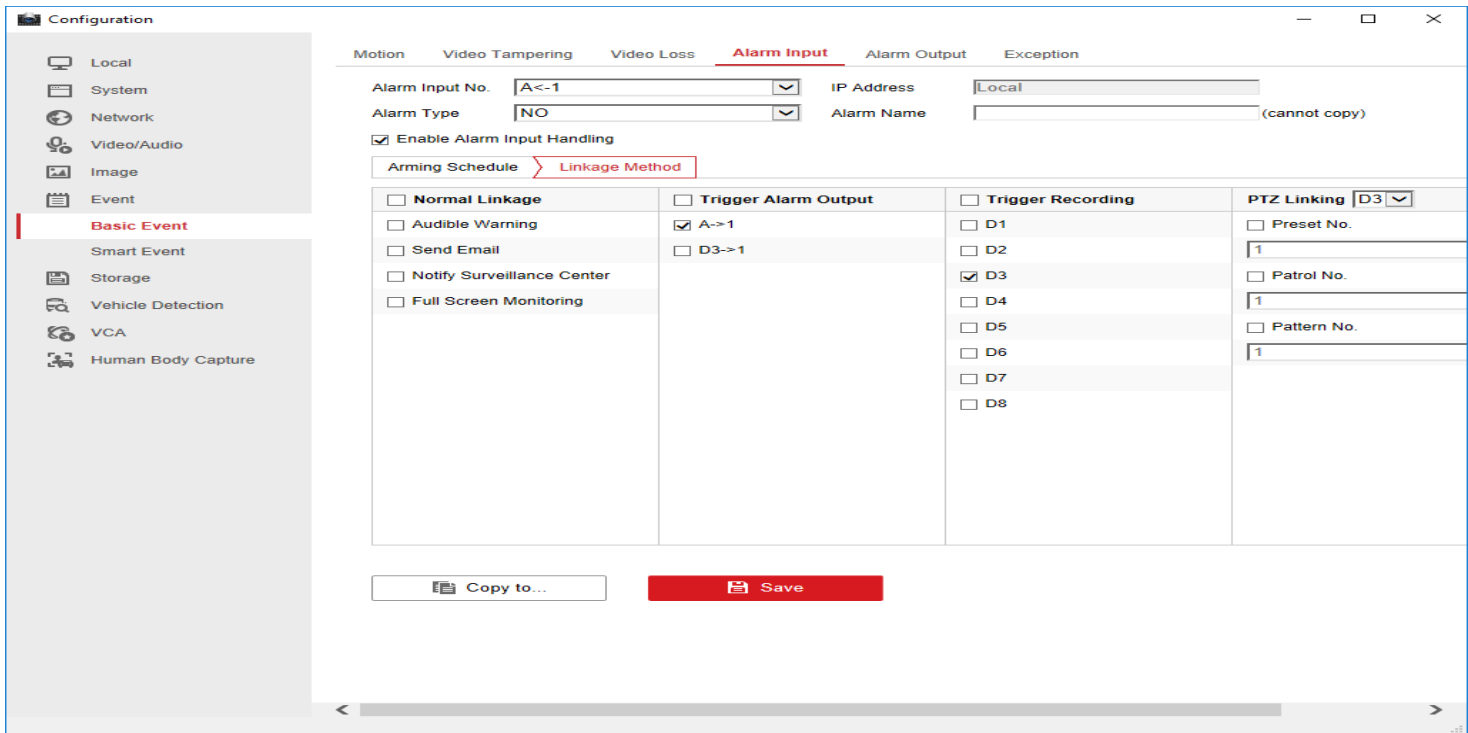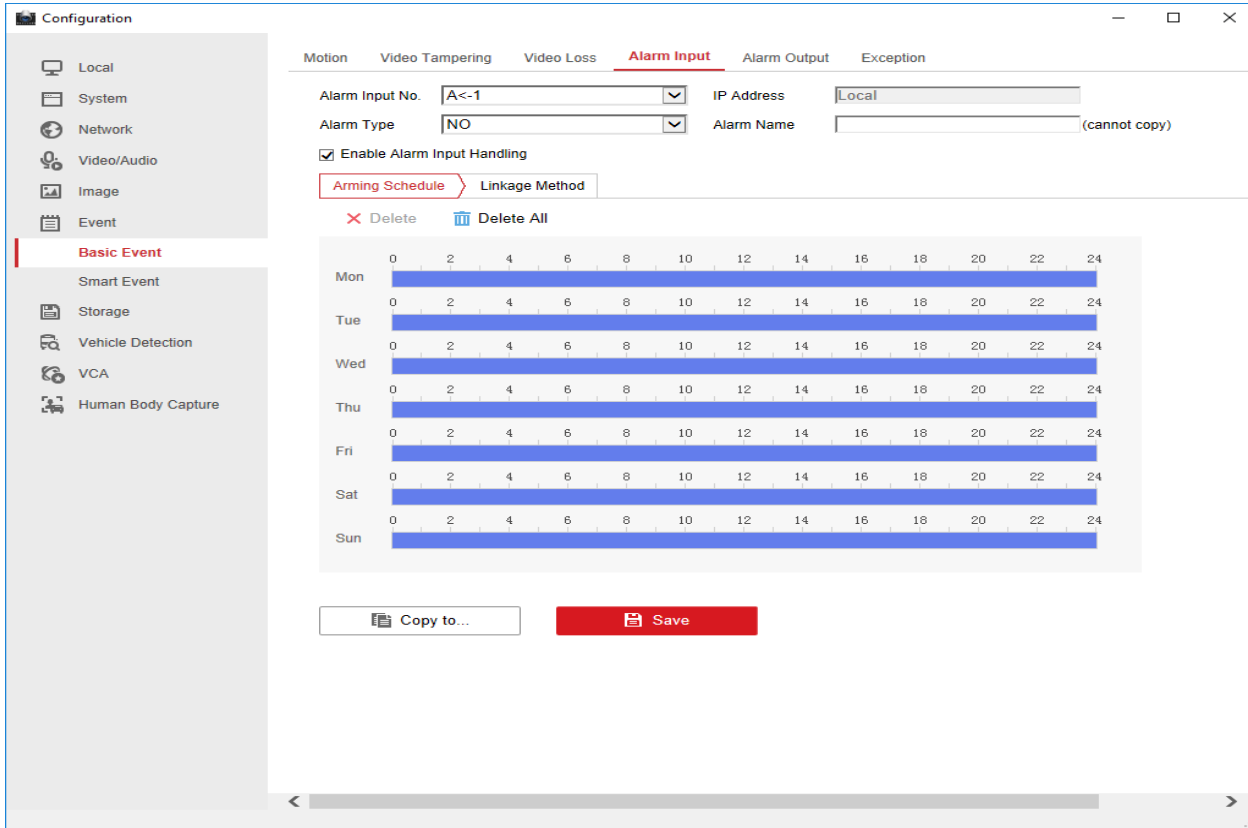

U idućem tabu "Linkage Method" povežemo željeni događaj sa alarmnim Outputom te koje kamere taj isti output aktivira. U našem slučaju želimo da po aktivaciji inputa kamera no.3 počne sa snimanjem te da po deaktivaciji input prestane.

Na alarmnoj centrali je potrebno isprogramirati PGM izlaz kao "System Armed status".