

EN 54-2
EN 54-4
EN 54-21
EN 12094-1



0051
0051-CPR-1498
0051-CPR-1499

PREVIDIA | COMPACT



ANALOG-ADDRESSABLE FIRE ALARM CONTROL PANEL,
EXTINGUISHANT SYSTEM CONTROL PANEL,
ALARM TRANSMISSION AND FAULT WARNING ROUTING EQUIPMENT

MANUAL FOR
SYSTEM CONFIGURATION,
COMMISSIONING AND
MAINTENANCE

Warranty

INIM Electronics s.r.l. (Seller, Our, Us) warrants the original purchaser that this product shall be free from defects in materials and workmanship under normal use for a period of 24 months. As INIM Electronics s.r.l. does not install this product directly, and due to the possibility that it may be used with other equipment not approved by Us; INIM Electronics s.r.l. does not warrant against loss of quality, degradation of performance of this product or actual damage that results from the use of products, parts or other replaceable items (such as consumables) that are neither made nor recommended by INIM Electronics. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. In no event shall INIM Electronics s.r.l. be liable to the purchaser or any other person for any loss or damage whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits, stolen goods, or claims by any other party caused by defective products or otherwise arising from the incorrect or otherwise improper installation or use of this product.

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage arising from improper maintenance or negligence
- damage caused by fire, flood, wind or lightning
- vandalism
- fair wear and tear

INIM Electronics s.r.l. shall, at its option, repair or replace any defective products. Improper use, that is, use for purposes other than those mentioned in this manual will void the warranty. Contact Our authorized dealer, or visit our website for further information regarding this warranty.

Limited warranty

INIM Electronics s.r.l. shall not be liable to the purchaser or any other person for damage arising from improper storage, handling or use of this product.

Installation of this Product must be carried out by qualified persons appointed by INIM Electronics. Installation of this Product must be carried out in accordance with Our instructions in the product manual.

Copyright

The information contained in this document is the sole property of INIM Electronics s.r.l.

No part may be copied without written authorization from INIM Electronics s.r.l.

All rights reserved.

Table of contents

	Warranty.....	2
	Limited warranty.....	2
	Copyright.....	2
	Table of contents	3
Chapter 1	General information	5
1.1	Manufacturer's details	5
1.2	About this manual	5
1.3	Description of the configuration and programming process	6
1.4	Operator classification - Access Levels	6
Chapter 2	Configuration	7
2.1	First startup.....	7
2.2	Access to programming	8
2.3	Accessing the configuration menu	8
2.4	Access to the device modification menu	9
2.5	Resetting factory default data	10
Chapter 3	System Parameters	11
3.1	General parameters of the control panel	11
3.2	Configuration of the Inim Cloud fire service	11
3.3	Configuring the Ethernet network.....	12
3.4	Configuring the Hornet+ network.....	13
3.5	Configuring the loops.....	13
3.6	SD card functions.....	16
3.7	Configuring the terminals	16
3.8	Configuring the users.....	17
3.9	Configuring the communicator	17
3.10	Configuring the extinction channel	18
3.11	Setting the date and time.....	22
3.12	Firmware revision	22
Chapter 4	Parameters of devices and their groupings.....	23
4.1	Loop point parameters	23
4.2	Parameters of control panel terminals.....	24
4.3	Zone parameters	25
4.4	Output group parameters.....	26
4.5	Replicate programming procedure.....	26
Chapter 5	Commissioning.....	27
5.1	Testing the Control panel.....	27
5.2	Testing to detectors and manual activations.....	28
5.3	Testing signalling and activations	28
5.4	Extinction system test	28
Chapter 6	Maintenance	29
6.1	Testing the control panel.....	29
6.2	Testing the detectors	29
6.3	Manual activation test	29
6.4	Testing signalling and activations	29
6.5	Testing the extinction system	29

General information

1.1 Manufacturer's details

Manufacturer: INIM ELECTRONICS S.R.L.

Production plant: Centobuchi, via Dei Lavoratori 10

Municipality: 63076, Montepandone (AP), Italy

Tel.: +39 0735 705007

Fax: +39 0735 704912

E-mail: info@inim.biz

Web: www.inim.biz

The personnel authorized by the manufacturer to repair or replace any part of the system have authorization to work only on devices marketed under the brand of INIM Electronics.

1.2 About this manual

Manual code: DCMCINE0PREVIDIAC

Revision: 1.20

This manual describes the procedures for the configuration, commissioning and maintenance of the Previdia Compact fire-detection system.

1.2.1 Graphic conventions

Following are the graphic conventions used in this manual:

Conventions	Example	Description
Text in italics	Refer to <i>paragraph 1.2.1 Graphic conventions</i>	Directs you to the title of a chapter, section, paragraph, table or figure in this or any other indicated manual.
[Uppercase letter] or [number]	[A] or [1]	Symbolic representation of a part of the apparatus or video object.

Note: *The notes contain important information which is highlighted external to the text it refers to.*

Attention: *The "Attention" prompts indicate that total or partial disregard of the procedure could cause damage to the device or its connected peripherals.*

1.3 Description of the configuration and programming process

Following is a flow chart which summarizes the operations to be carried out during the installation and commissioning phases of the Previdia Compact system and indications regarding the manuals to refer to for each operation.

1. Installation and cabling (refer to the Installation Manual)
2. Addressing devices
3. Initializing (refer to the Installation Manual)
4. Configuration from the front plate (operations described in this manual)
5. Troubleshooting (operations described in this manual)
6. Connection to a PC and reading (optional)
7. Configuration of parameters (editing data, optional)
8. Writing on control panel and testing (optional)
9. Commissioning (operations described in this manual)
10. Handover of installation
11. Maintenance (operations described in this manual)

1.4 Operator classification - Access Levels

The control panel has 4 distinct access levels:

Level 1: Public level - this is the normal access level of the control panel and is the access level for building inhabitants who are neither authorized to use the control panel nor instructed in its use.

This level allows building inhabitants to view information on the screen and signalling LEDs, as well as interact and scroll through information via the buttons and touchscreen. Level 1 allows the following operations only:

- mute buzzer
- test signalling LEDs
- activate alarm signalling when an early-warning condition is running

Level 2: Authorized users - this access level is for the system supervisors and is for authorized personnel who are adequately instructed in the system functions.

Access requires the use of a key or entry of a valid access code with sufficient access rights. In addition to the operations described for level 1 it is also possible to carry out the following operations:

- mute alarm signalling devices
- rearm the control panel
- activate alarm signalling devices manually
- disable control panel elements
- place in test status one or more of the system elements

The system provides two additional sub-levels of authorized user:

- **Superuser level**, same as the previous one, with the added possibility of replacing a loop device and registering control panels to their account with the Inim Cloud service
- **Maintenance operator level**, same as the previous level with the added possibility of stopping the valve pulse for those models that support extinction functions

Level 3: Programming - this access level is for specialized technical personnel who carry out system configuration, commissioning and maintenance.

After inserting the jumper which enables programming, access requires entry of a valid access code with sufficient access rights. Refer to the manual for system configuration, commissioning and maintenance.

Only authorized technicians, appointed by the Manufacturer can, by means of special tools, carry out repair work on the motherboard.


Level 4: Only authorized technicians, appointed by the Manufacturer can, by means of special tools, carry out repair work on the motherboard.

Configuration

2.1 First startup

Once the installation and cabling procedures have been completed (refer to the Installation Manual of the Previdia Compact system) the system is ready for first startup.

In the case of first startup and after having performed the procedure to set the factory data, it is necessary to enter the unlocking code:

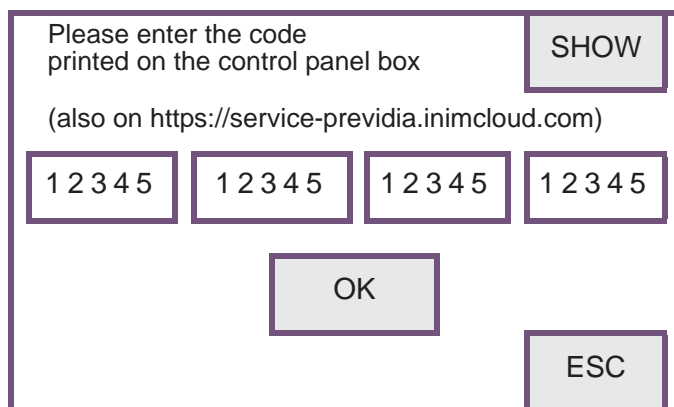

This is a code printed on the label affixed to the cardboard box containing the control panel. Alternatively, it can be found at the following Internet address (the serial number of the control panel will be requested, once provided the unlocking code will be supplied):

<https://service-previdia.inimcloud.com>

After entering the unlocking code, selection of the control panel languages is required (a mandatory main language and an optional second language).

The control panel screen will be as follows:

[A]	Buttons to access the events log, system status and programming.
[B]	Status bar (always present) shows essential information regarding the system.
[C]	"Home" button
[D]	Button for changing the language of the control panel, if a second language is provided

In the case of faults or other types of events, the latter will be shown on the display. You can retrieve the home screen at any time by tapping on the respective icon on the status bar [C].



In order to configure the Previdia control panel it is necessary to work through the following procedure:

1. Access programming (paragraph 2.2)
2. Access the configuration menu (paragraph 2.3)


3. Enroll the loop devices, with relative fault search (*paragraph 3.5.2*)
4. Set up the control panel parameters (*Chapter 3, System Parameters*)
5. Configure the connected devices and their groups (*Chapter 4, Parameters of devices and their groupings*)
6. Check eventual signalling and relative fault search (*paragraph 5.3*)
7. Set the date and time (*paragraph 3.11*)

Note: *Once the configuration operations have been completed correctly, the control panel will be ready to operate.
The control panel is configured to consider each input point (detector, module, terminal) as a fire-alarm point. Therefore, in the event of a fire alarm it will activate all the outputs available on its loops or control panel terminals.
At this point it is necessary to proceed with any changes to the configuration data for the distribution of points in zones, edit descriptions of the various system elements, define specific activation sequences, etc.*

2.2 Access to programming


To access the programming phase of the Previdia control panel, it is necessary to work through the following procedure:

1. Insert the programming jumper (see opposite, *[D]*).
2. Press the **Programming** button on the stand-by screen (see above, *[A]*).
3. A keypad will appear (see opposite, *[E]*) for the entry of a code with installation privileges.

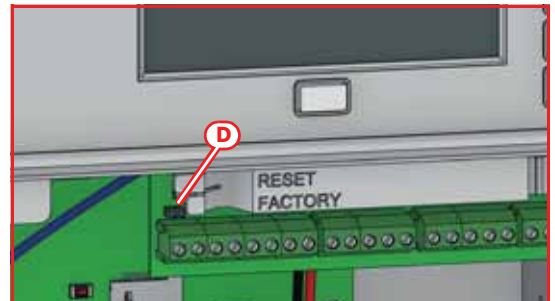

Note: *The default access code to level 3 is "00004".*

4. The accessed programming menu will provide the following options:
 - Configuration (refer to *paragraph 2.3*)
 - Modify (refer to *paragraph 2.4*)
 - Factory default settings (refer to *paragraph 2.5*)

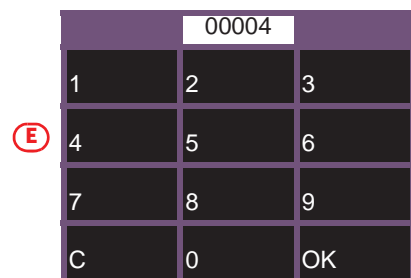

2.3 Accessing the configuration menu

The configuration menu allows the programmer to put all the parts of the Previdia Compact System in the configuration (control panel, connections and connected devices) after the initial installation phase.

To access the configuration menu it is necessary to first access the programming phase of the control panel (*paragraph 2.2*) and then tap on the **Configuration** button which appears on the screen. Once inside the Configuration menu, the control panel screen will show an image of the control panel front plate highlighting the access buttons to the configuration sections.

Icon	Function buttons	Display
	Access to the configuration of the general parameters of the control panel. Refer to <i>paragraph 3.1</i>	
	Access to the configuration of the general parameters of the Inim Cloud service. Refer to <i>paragraph 3.2.</i>	
	Access to the configuration of the extinction channel. Refer to <i>paragraph 3.10</i>	
	Access to the configuration of the Ethernet network. Refer to <i>paragraph 3.3</i>	
	Access to the configuration of the Hornet+ network. Refer to <i>paragraph 3.4</i>	
	Access to the configuration of the loops (loop 1 and loop 2). Refer to <i>paragraph 3.5</i>	
	Access to the functions provided by the SD card. Refer to <i>paragraph 3.6</i>	
	Access to the configuration of the inputs and outputs provided by the control panel terminals. Refer to <i>paragraph 4.2</i>	
	Access to the configuration of the control panel access codes. Refer to <i>paragraph 3.8</i>	
	Access to the configuration of the general parameters of the remote communicator. Refer to <i>paragraph 3.9</i>	
	Access to the configuration of the power supply. Refer to <i>paragraph 5.1</i>	

2.4 Access to the device modification menu

Once the Previdia Compact system has been configured it is necessary to set the parameters, or change the default programming of the devices connected to the control panel, individually or in a group.

The Previdia Compact control panel provides a direct programming option on the control panel for its connected devices and their logical groups (zones and output groups) without need of accessing the "Configuration" section (*paragraph 2.3*). To access it, you must access the programming phase of the control panel (*paragraph 2.2*) and then press the **Modify** button on the menu that appears on the screen.

The section you access will show a list containing the access buttons to the programming subsections::

- Zones (refer to *paragraph 4.3*)
- Output groups (refer to *paragraph 4.4*)
- I/O Lines (refer to *paragraph 4.2*)
- Loop points (refer to *paragraph 4.1*)


Pressing one of these buttons will allow you to view the list of the respective elements. The list shows the index, description and status of each element, by tapping on one of the lines you will be able to program the parameters of the individual element.

2.5 Resetting factory default data

The resetting of the factory default data and consequent deletion of the configuration data on the Previdia Compact control panel can be done in two ways:

- By selecting the **Factory data** option from the programming menu (refer to *paragraph 2.2*).
- Using the buttons available on the plastic support of the electronic boards, as shown in the figure [A]:

1. Press the **FACTORY** button.
2. While holding down the **FACTORY**, button, press the **RESET** button then release it.

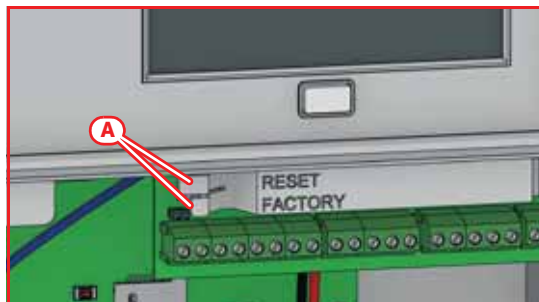

After confirmation of the request for reset to factory default data, the control panel will carry out the same operations as at first startup, described at the beginning of this manual.


A progress bar will confirm the ongoing reset of factory data.

System Parameters

The configuration of the Previdia Compact control panel, its interfaces and external connections provides for the settings of a series of parameters reachable from the control panel by accessing control panel programming (*paragraph 2.2*) and then pressing the **Configuration** button on the menu shown on the screen.


Once inside the Configuration menu (*paragraph 2.3*), the control panel screen will show an image of the control panel front plate highlighting the access buttons to the configuration sections.

3.1 General parameters of the control panel

Tapping on the appropriate icon inside the control panel configuration screen accesses the configuration section of some of the control panel parameters. 


The available parameters are:

- **Panel name**, editable field for the description of the control panel
- **Mains failure delay**, field for the delay (expressed in minutes) which must pass between detection of mains failure by the control panel and mains failure signalling
- **Disable buzzer**, option that, if activated, disables the control panel buzzer
- **Direct alarm on second pre-alarm**, option that, if activated, generates an alarm signal as soon as two detectors go into pre-alarm status, regardless of the zone they belong to. Otherwise the alarm condition will activate at the end of the first pre-alarm time.

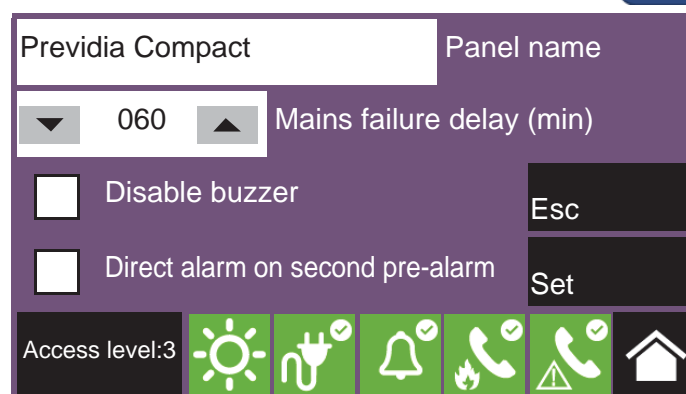

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

3.2 Configuration of the Inim Cloud fire service

Tapping on the appropriate icon inside the control panel configuration screen accesses the configuration section of the Inim Cloud service. 

A window will open containing the following buttons:


- **Parameter**, for the modification of some parameters related to the Cloud
- **Enroll**, for the registration procedure of the control panel to the installer account (refer to *paragraph 3.2.1 Registration of the control panel to Inim Cloud*)
- **Net diagnostics** to start a procedure to check the various network functions required to communicate with the Cloud and obtain useful information in the event of problems.

The information obtained is displayed in the box to the left of the section that opens.

The "Parameters" section provides:

- **Get date and time**, check box that allows you to set and update the date and time of the control panel from the Cloud, in accordance with the time zone selected by pressing the dedicated button and setting the area and zone
- **Ethernet**, check box that enables the Ethernet channel to communicate with the cloud
- **Cloud failure delay**, check box that allows you to set the time interval, indicated below, after which, in the event of lack of communication with the Cloud, the relative fault will be reported

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

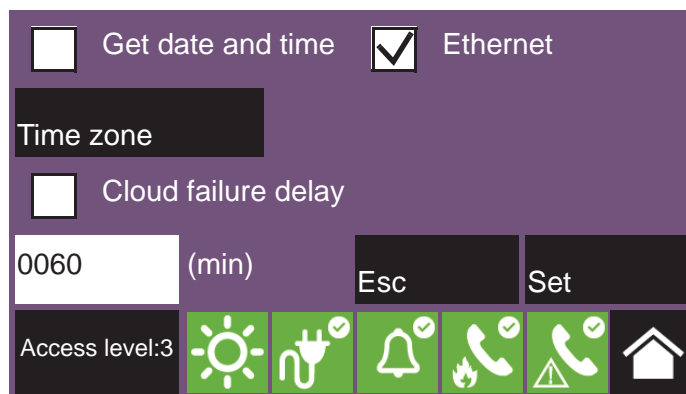

3.2.1 Registration of the control panel to Inim Cloud

The registration of a control panel is an operation that allows its accessibility to all Inim Cloud service users. It is therefore necessary that the registration is carried out first by the installer, registered with the Inim Cloud service, so that at a later time users can add the already registered control panel to their own account.

1. Access control panel programming (*paragraph 2.2*) and then tap the "Cloud" icon in the control panel configuration screen.
2. Access the "Enroll" section
3. Enter the 8-digit ID-installer number contained in the confirmation email received during registration to the Cloud as an installer.



In this section you can activate the "Installer Property" option. If activated, the installer reserves the management of accesses to the system by the Cloud. If not activated, this property is assigned to the first user enrolled.

4. Press the **Enroll** button. The control panel carries out the registration of the the control panel on the Cloud and the display will show the "WAIT" message.
If the control panel date/time differs by more than 15 minutes from the exact date/time, the registration process may result negative .
5. The display will show the result of the procedure using one of the following messages:
 - "Account created!": the control panel has been successfully registered to the Cloud
 - "Communicat.Error": generic communication error.

The possible causes may be:

- no Internet connection
- date of manufacture of the control panel is earlier than dd/mm/yyyy
- date/time of the control panel is different, ahead or behind the exact date/time by more than 15 minutes
- "Already enrolled": the control panel is already registered to Cloud
- "Panel notEnabled": the control panel cannot be registered to Cloud.

3.3 Configuring the Ethernet network

If an Ethernet network connection is used, it will be necessary to set the IP address and network parameters.

This operation must be carried out for each of the Previdia control panels and repeaters connected to the Ethernet network via LAN cable.

To set the network parameters you must enter the programming phase of the control panel (*paragraph 2.2*) and then tap on the appropriate icon inside the control panel configuration screen.



The available parameters are:

- **IP address**
- **Netmask**
- **Gateway**
- **Communication port**
- **DNS Server**, IP address of the DNS server to be used to access the Cloud (default: 8.8.8.8)

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

192	168	1	121	IP			
255	255	255	0	Net mask			
192	168	1	1	Gateway			
8	8	8	8	DNS Server			
6001	Port			Esc	Set		
Access level:3							

3.4 Configuring the Hornet+ network

If the installation has control panels connected in a Hornet+ network, it will be necessary to assign the network address to each control panel.

To set the network parameters you must enter the programming phase of the control panel (*paragraph 2.2*) and then tap on the appropriate icon inside the control panel configuration screen.

The available parameters are:

- **Bit rate (bps)**
- **Network Address**
- **Hornet gateway**, option that, if activated, will set the control panel as the gateway to the network

Note:

Only one point can be set as the gateway to a Hornet+ network.

Each control panel in the same Hornet+ network must be set with the same bit rate and univocal address.

Hornet Configuration

57600 bps Hornet gateway

000 Address

Esc

Set

Access level:3

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

3.5 Configuring the loops

The operations for the configuration of the loops and the devices connected to them can be reached by first accessing the control panel programming section (*paragraph 2.2*) and then by tapping on the icon of the loop you wish to configure.

The section reached in this way provides the following buttons:

- **Auto-configure**, button to access the automatic loop-configuration procedure (refer to *paragraph 3.5.1*).
- **Diagnostics**, button to access the section for loop diagnostics (refer to *paragraph 3.5.2*).
- **Parameters**, button to access the section for the selection of the type of devices installed on the loop (refer to *paragraph 3.5.3*).
- **Esc**, button to step back.

Note:

For the first configuration of the system, it is recommended that you run the loop configuration after appropriate addressing of the devices as per the following order of access to the sections:

- *Parameters*
- *Auto-configure*
- *Diagnostics*

3.5.1 Auto-configuration of the loop


Pressing the **Auto-configure** button provides you with the following buttons for access to the relative subsections:

- Enroll
- Readdress
- Update
- Add/Change

Enroll: This button performs a loop scan (after command confirmation) which searches for all the connected devices and puts those found into the configuration [A].

A report of the devices will be shown when the scan ends.

The **Diagnostics** button [B] allows you to step to the technical report which can also be accessed from the Loop configuration menu (refer to paragraph 3.5.2).

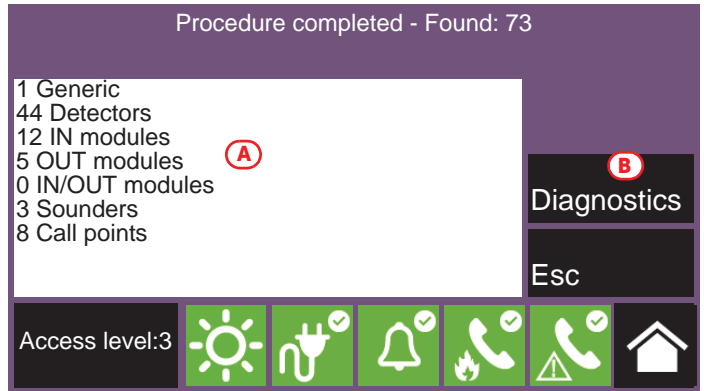

Note: *It is possible to use this procedure only when you have already performed an addressing operation, automatic or manual, on the devices connected to the loop.*


Readdress: This button performs a loop scan (after command confirmation) which searches for the serial numbers of all the devices. The control panel automatically assigns an address to each device in consecutive order, following the connection order on the loop.

This operation may take some minutes depending on the size and composition of the loop.

A summarized report is shown containing the devices found, as described in the "Enroll" section ([A]).

Update: This button starts the procedure (after command confirmation) which is to be performed after changes have been carried out on a previously configured loop (add, remove or replace devices).

The control panel provides a table showing the previously enrolled configuration in the columns on the left [A], and the newly detected configuration in the columns on the right [B]. Positions in which changes have not been detected will be outlined in green. Changes will be indicated in white.

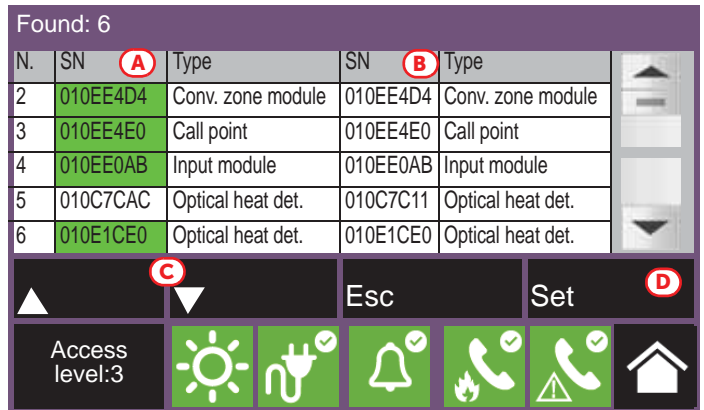

This operation may take some minutes depending on the size and composition of the loop.


It is possible to select a device from the column on the right and move it up or down by means of the arrow keys [C].

In this way you can select which addresses will be assigned when, after pressing the **Set** button [D], the process that re-addresses the loop devices starts.

Add/Change: This button accesses a section where you can select a specific address and change, remove or add a device manually.

At the side of the loop device list are a series of buttons which will allow you to work on the device selected by a screen tap gesture, as follows:

- **Delete:** button to delete the selected device.
- **Add/Change:** button to change or add a device manually.

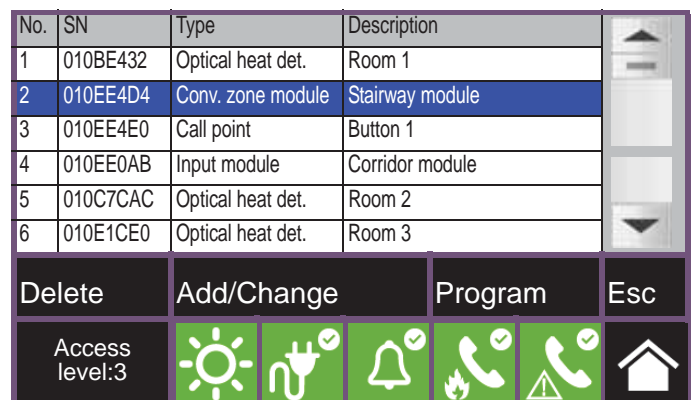

After completing the connection of a new device or replacing an old device, it is necessary to select the address involved then tap on the **Add/Change** button. When using Inim protocol, it is necessary to enter the serial number of the new device.


- **Program**: button to access a section where it is possible to change some of the device options (refer to *paragraph 4.1 Loop point parameters*).

Once this operation has been completed the control panel will communicate with the new device. The appearance of the type of device detected is the confirmation of its acquisition.

3.5.2 Loop diagnostics

The **Diagnostics** button in the Loop configuration menu accesses the section for the loop diagnosis.

The upper left side [A] shows some of the electrical data of the loop.

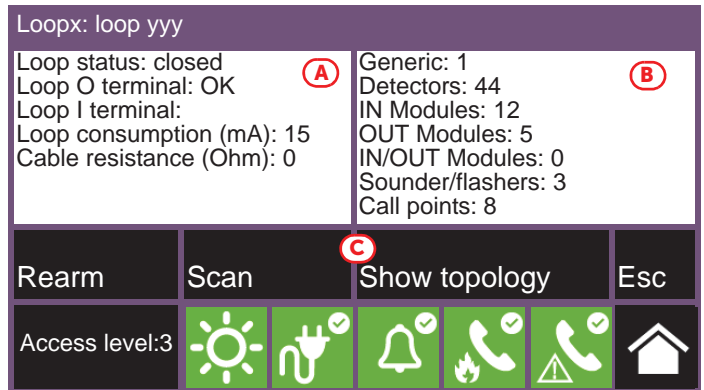

- **Loop status**: indicates whether the loop is a closed ring circuit or open
- **Loop O Terminal**: indicates eventual short-circuits or anomalies immediately on the loop output terminals
- **Loop I Terminal**: indicates eventual short-circuits or anomalies immediately on the loop input terminals
- **Loop Consumption**: indicates the voltage draw of the loop
- **Cable resistance**: indicates the resistance value of the cable

The upper right side [B] shows the number and type of devices currently in configuration.

The lower part [C] provides the following buttons:


- **Loop reset**, button to reset the loop and reassess its status. In the event of a "Loop open" fault, it will be necessary to tap on this button in order to check whether or not the interruption has been cleared.
- **Scan**, button to start a scan on an already enrolled loop. The procedure verifies whether there are any connected devices which are not in the configuration, if devices have been lost or if there are any other anomalies. The results of the scan can be viewed in the section on the top right of the display.
- **Show topology**, button which steps to the layout screen of the devices in the configuration of the already enrolled loop.

The layout shows all the devices which are connected to the loop and how they are connected to one another.

Any devices in alarm or fault status will be outlined in red or yellow [D].

The selection of a device accesses the management page of the device itself

The **Update** button [E] refreshes the screen by updating any alarms and faults signalled by the devices shown (restored fault events will not be shown).

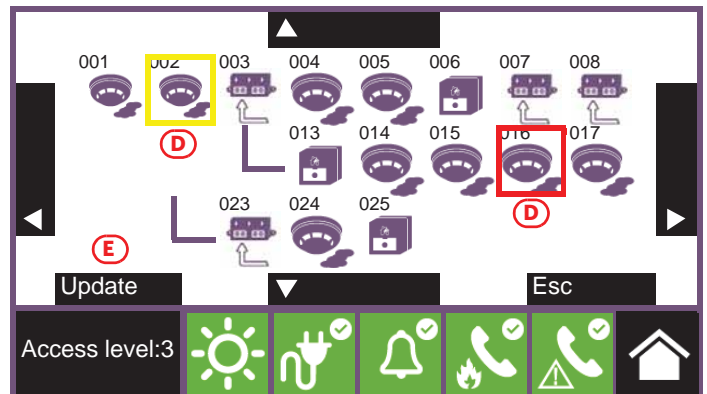


3.5.3 Loop Parameters

The **Parameters** button on the loop configuration menu allows you to set:

- Device protocol
- Wiring type (2 or 4 wires)

Note: *If you are making a two-wire connection, you can install a maximum of 32 fire-alarm devices on the loop (detectors or call points).*

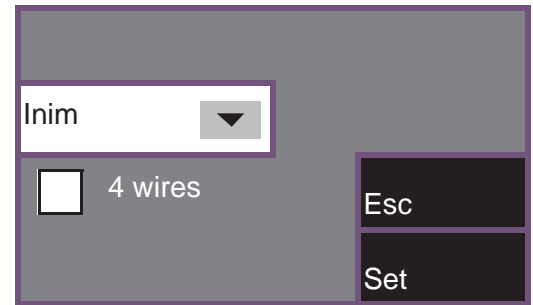

3.6 SD card functions

Tapping on the appropriate icon inside the control panel configuration screen accesses some of the functions available on the SD card.



A list with the following buttons will appear:

- **Save Program Data**, saves the control panel programming data to the SD card in a .dat file, the name of which coincides with the serial number of the control panel.
- **Save Log**, saves the contents of the events log to the SD card in a file named "xxxx_log.csv", where "xxxx" is the serial number of the control panel. You can import the data contained in the file into a spreadsheet
- **Read Program Data**, if there is a .dat file on the SD card whose name coincides with the serial number of the control panel, the programming data contained in it will overwrite that currently used.
- **Read Display Config**, if the "Desktop.Bin" file is on the SD card, the data contained in it (images, buttons and labels to be displayed in the stand-by screen) will overwrite that currently used. If the previously-mentioned file is not present on the SD card, and there is the file "Logo. bmp" file is, the image contained in it (260x222 pixel) will be shown on the stand-by screen.

The **Esc** and **Set** buttons will allow you to exit the section without changing the programming or saving it.

3.7 Configuring the terminals

The configuration of the motherboard terminals includes both the configuration of the devices connected to the control panel motherboard terminals, the "I/O" terminals and relay output terminals.

Tapping on the appropriate icon inside the control panel configuration screen accesses the configuration section of the input/output terminals.




The configuration of the "I/O" [A] terminals requires firstly specification of the type of device connected to them, then the programming of the parameters, which vary according to the specified choice.. Each of the 4 "I/O" terminals can be configured as:

- Output
- Input
- Not used

For control panel models that provide extinction functions, the previous screen appears as shown in the figure.

In this case, terminals "I/O3" and "I/O4" are not programmable, and are dedicated to signalling the pre-extinction condition and the activation of the Electrovalve output.

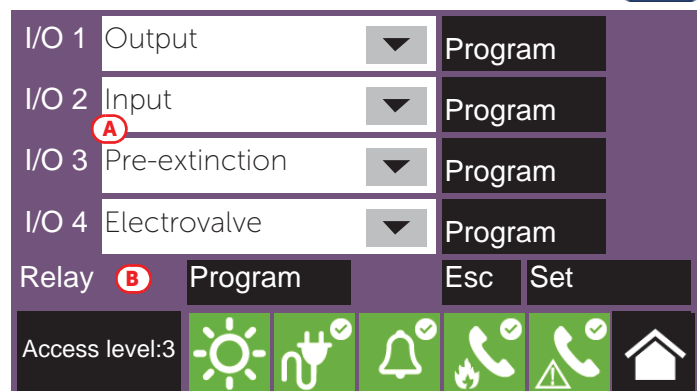

The "relay" output is also available on the list of "I/O" terminals [B].

For each terminal, regardless of whether it is an input or an output, the **Program** button allows access to the programming menu of the connected device (refer to *paragraph 4.2*).

3.8 Configuring the users

Tapping on the appropriate icon inside the control panel configuration screen accesses the configuration section of the control panel access codes.

This section provides the list of available codes.


Once a code is selected, you can remove it from the system by pressing the **Delete** button.

Instead the **Program** button will allow you to set its parameters:

- **Description**, label that identifies the user and that is shown in the events it is involved in.
- **PIN**, 5-figure number that identifies the user, thus allowing access to the system.
- **Type**, determines the set of operations the user can control. The following values are possible (refer to paragraph 1.4 and the *User manual*):
 - **No code**, code not enabled to access the system.
 - **User level**, coincides with "Level 2" (authorized user)
 - **Superuser level**, same as the previous one, with the added possibility of replacing a loop device and registering control panels to their account with the Inim Cloud service
 - **Maintenance operator level**, same as the previous level with the added possibility of stopping the valve pulse for those models that support extinction functions
 - **User level**, coincides with "Level 3" (authorized user)

Previdia Compact control panels are supplied at default with the first 4 codes already pre-set:

Code number	Code type	Default PIN
1	User level	00001
2	Superuser level	00002
3	Maintenance level	00003
4	Installer level	00004
5 ...	No code	/

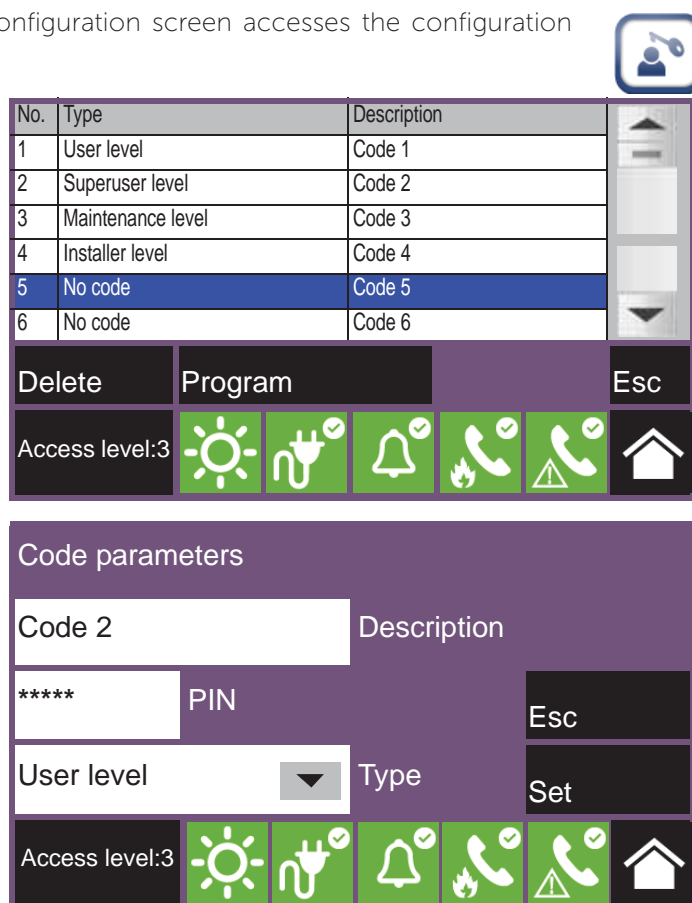


3.9 Configuring the communicator

To set the network parameters you must first enter the control panel programming phase (paragraph 2.2) and then tap on the appropriate icon inside the control panel configuration screen.

The boxes marked [A] will allow you to select the communication channels you want to use:

- **Ethernet**, for transmission of events with the SIA-IP protocol over Ethernet cable
- **PREVIDIA-C-DIAL**, for transmission through the optional communicator of the Previdia Compact. If selected, the following channels will also become available:
 - **SIM (SIA-IP)**, for transmission of events with the SIA-IP protocol over 3G
 - **SIM (Voice/SMS)**, for transmission of events with Contact-ID protocol, of voice messages or SMS texts over 3G
 - **PSTN**, transmission of events with Contact-ID protocol or voice messages over the landline

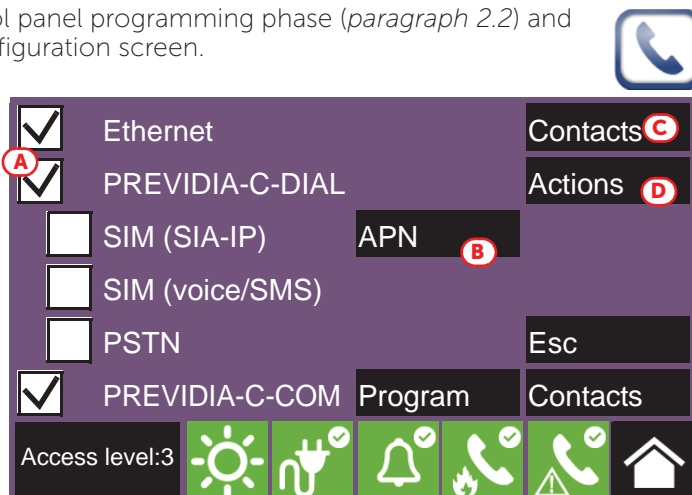

- **PREVIDIA-C-COM**, transmission through the optional serial and IP interface module.
If selected the relative **Program** button will activate (refer to *paragraph 3.9.1*).

The **APN** button *[B]* provides access to a section for the parameters required for the connection to the mobile network.

The **Contacts** button *[C]* accesses the phone book programming phase.

After selecting a contact, you will be able to configure it by pressing the **Program** button.

If you are configuring an "SMS" or "PSTN" type channel, the communication protocol will be requested:

- SIA-IP
- Contact ID
- Voice call
- SMS

The parameters made available in the successive section for the programming of the selected contact vary depending on the set protocol.

Pressing the **Actions** button *[D]* on the communicator configuration screen will access the list of communication operations set on the control panel. Selecting one of them and then pressing the **Program** button accesses the configuration screen.

The "Type" parameter allows you to specify which events will trigger the action (alarm, fault, etc.).

Note: *For the first two actions (alarm and system failure), the "Description" and "Type" fields are not editable.*

The **Associated contacts** button accesses a screen that allows you to specify to which contacts the event communication will be sent.

If the case in which the presence of the Previdia-C-DIAL communicator or the PREVIDIA-C-COM board, set by means of the option above, is different from that detected by the control panel, the appropriate icon inside the control panel configuration screen will change status and appear in yellow



3.9.1 Configuration of the PREVIDIA-C-COM module

The configuration of the PREVIDIA-C-COM module involves the selection of the protocol to be enabled on each of the 4 available ports thanks to the terminals on board the module.

By tapping the communicator configuration icon on the control panel configuration screen, it is then necessary to enable the PREVIDIA-C-COM module and access to the relative programming via the Program button.



For each port (RS232-1, RS232-2, RS485-1, RS485-2) it is necessary to choose the protocol to be enabled on the relevant port and, if required, program the related parameters by pressing the **Program** button.

If a PREVIDIA-C-COM-LAN is configured, the "Ethernet" channel is also available.

By pressing the relevant **Program** button you will be able set the parameters for communication with the module via this port and thus access the specific functions of the PREVIDIA-C-COM-LAN (web server, email, cameras, BacNet).

RS232-1	Printer	▼	Program
RS232-2	Events log	▼	Program
RS485-1	Not used	▼	Program
RS485-2	Smart485IN	▼	Program
Ethernet	Program	Esc	Set
Access level:3			

3.10 Configuring the extinction channel

The parameters of the extinction channel, for control-panels that provide one, can be accessed through the control-panel programming section (*paragraph 2.2*), by simply tapping on the relevant icon on the configuration screen.




The successive sections provide the various programmable parameters (refer to the extinction flowchart and the table of extinction-terminal functions in the installation manual).

3.10.1 Extinction times

The following parameters can be set on the extinction-channel configuration page:

- **Automatic pre-extinction time:** duration of pre-extinction time, in seconds, when triggered by fire-fighting devices connected to the control panel.
- **Manual pre-extinction time:** duration of pre-extinction time, in seconds, when triggered by input devices programmed for manual-extinction (refer to following sections).
- **Valve Pulse** (option 4.21 "Control of flooding time" of EN 12094-1): duration of release time, in seconds. Leaving the respective box [A] empty removes all time limitations.

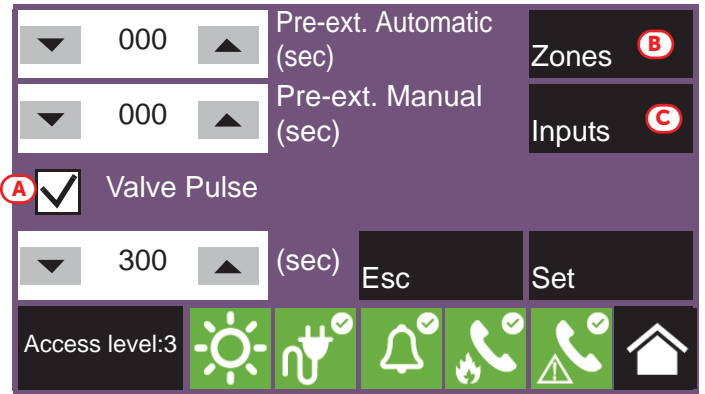


3.10.2 Trigger zones

The **Zones** button [B] accesses a screen that permits up to three zones to activate the extinction phase when, within one of the indicated zones, a certain number of alarms is reached.

In order to select the zones, you must first activate one of the three available options via the [D] check box, then tap on the respective field at the side [E] to access the list of configured zones. The arrow buttons [F] will allow you to specify the number of alarms (maximum 3).

The image at the side shows how the system can be configured so that the extinction channel is activated when there are at least two alarms in zone 2.

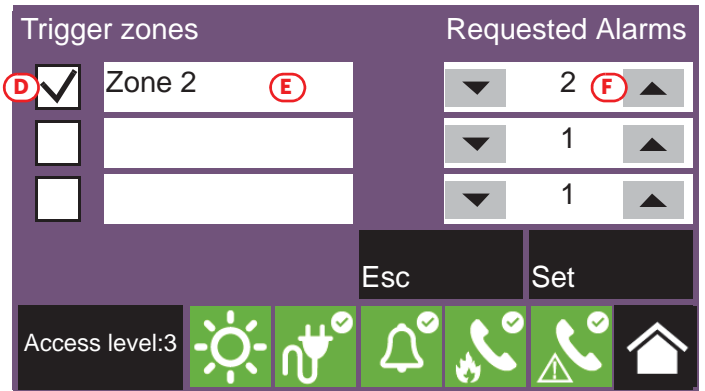

3.10.3 Extinction input

The **Inputs** button [C] will allow you to configure the control-panel input points to activate the extinction functions.

EN12094-1: To ensure compliance with EN 12094-1, the inputs in use must be on-board I/O or supervised inputs on loop modules (such as the EM312SR module).
 It is not possible to connect more than 32 devices to each of the selected input terminals.
 It is necessary to specify the input associated with the "Manual Extinction" function (the others are optional).


These functions are grouped into the following categories:

- **Activate**

This section provides the extinction-activation parameters.

The parameters of the "Manual extinction" command allow for the selection of an associated group (loop 1, loop 2 or one of the "I/O" terminals [G]), and the point [H] that activates the release of the fire extinguishing agent in accordance with the programmed pre-extinction time.

Selecting "--" for the group disables manual extinction on the control panel.

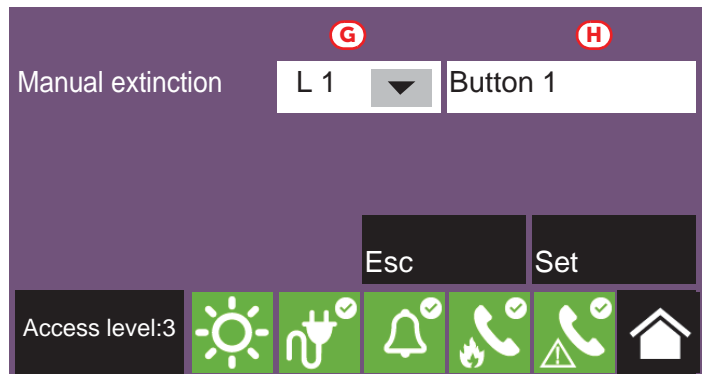

• Deactivate

This section provides the parameters for stopping the extinction procedure. There are 4 different modes available for stopping the extinction procedure, each one attributable to a different input:








- **Stop Extinct. ABORT** (Option 4.27 "Emergency interruption device" of EN 12094-1): stops the extinction procedure definitively
- **Stop Extinct. HOLD** (Option 4.20 "Emergency hold device" of EN 12094-1): stops the extinction procedure until reset (which restarts the pre-extinction time)
- **Stop Extinct. ADD** (Option 4.20 "Emergency hold device" of EN 12094-1): stop the extinction procedure until reset (the pre-extinction time-counter will not be altered)
- **Stop Extinct. EXTERN** (Option 4.19 "Monitoring the status of components" of EN 12094-1): same as "Stop Extinct. Hold", but activated without human intervention (for example by a door contact that inhibits the release of gas)

The parameters of the 4 commands allow for the assignment of a group (loop 1, loop 2 or one of the terminals "I/O" [G]) and the point [H] which activates the relative stop-extinction mode.

Selecting "--" for the assigned group disables the related stop-extinction mode.

Stop Extinct. ABORT	L 1	▼	Input module 1
Stop Extinct. HOLD	L 1	▼	Button 2
Stop Extinct. ADD	L 2	▼	Input module 2
Stop Extinct. EXTERN	--	▼	

Esc Set

Access level:3       

EN12094-1: If the "Stop Extinction ABORT" function is utilized with a Previdia Compact control panel, the "Stop Extinction HOLD" and "Stop Extinction ADD" functions cannot be associated with inputs, and vice versa.

• Disable

This section provides the parameters of disabling the extinction procedure. There are 3 different modes available for disabling the extinction procedure, each one attributable to a different input:








- **Disab. Extinction:** disables all the extinction functions
- **Disab. Man. Extinc.:** disables the programmed inputs for manual activation of the extinction procedure
- **Disab. Man. Extinc.** (option 4.23 "Manual only mode" of EN 12094-1): disables the automatic-activation of the extinction procedure

The parameters of the 3 different disablement modes allow for the assignment of a group (loop 1, loop 2 or one of the terminals "I/O" [G]) and the point [H] which activates the related extinction-disablement mode.

Selecting "--" for the assigned group disables the related extinction-disablement mode.

Disab. Extinction	L 1	▼	Input module 4
Disab. Man. Extinc.	L 2	▼	Button 3
Disab. Man. Extinc.	--	▼	

Esc Set

Access level:3       

• Flow/Pressure

This section provides the parameters for the functions of the "Pressure switch", "Pressure switch confirm" and "Flow switch" that can be associated with three different inputs:








- **Pressure switch** (option 4.19 "Monitoring of the status of components" of EN 12094-1): input for the connection of a pressure valve that activates in the event of low pressure in the cylinders
- **Flow switch** (option 4.18 "Signal representing the flow of the extinguishing agent" EN 12094-1): input for the connection of a flow sensor, the activation of which signals the release of the fire-extinguishing gas
- **Press. switch Confirm:** input for the connection of a device used to verify the release condition of the fire-extinguishing gas by means of the pressure switch

The parameters of the 3 different functions allow for the assignment of a group (loop 1, loop 2 or one of the terminals "I/O" [G]) and the point [H] associated with the extinction function.

Selecting "--" for the assigned group disables the related function type.

Pressure switch	L 1	▼	Button 4
Flow switch	L 2	▼	Button 5
Press. switch Confirm	--	▼	

Esc Set

Access level:3       

3.10.4 Extinction outputs

In order to configure an output for the extinction function, you must associate it with one of the default groups prepared for this purpose, and described below.

EN12094-1: You must use on-board I/O or supervised outputs on the loop (such as the EM312SR module or sounder/flashers on the loop).

You must provide outputs associated with the following functions (the others are optional):

- Electrovalve
- Pre-extinction
- Release

The "Electrovalve" function can only be associated with the output corresponding to the "I/O 4" terminal on the motherboard of the control panel.

The default "Pre-Extinction" function is associated with the output corresponding to the "I/O 3" terminal on the motherboard of the control panel.


The Previdia Compact control panel has pre-configured default output groups with specific extinction functions:

Outputs group		Activation	EN 12094-1	Associated extinction function
3	Extinction	Group that activates the release of the gas.		Release
4	Pre-extinction	Group that goes into pre-alarm status during the pre-extinction time and into alarm status during the release phase.	By programming a different tone pattern (or sound) for the pre-alarm and alarm conditions of an output associated with this group, this output will implement option 4.30 ("Activation of alarm devices with different signals").	Pre-extinction
5	Automatic Extinc.	Group that activates during pre-extinction and release conditions, if they are triggered by automatic activations (e.g. two alarms in a specific zone).		
6	Manual Extinc.	Group that activates during pre-extinction and release conditions, if they are triggered by inputs programmed for manual extinction activation.		
7	Manual Stop	Group that follows the activation of inputs programmed as "Stop extinction Abort", "Stop extinction Hold" or "Stop extinction Add".	Options 4.27 "Emergency abort device" and 4.20 "Emergency hold device"	
8	Stop By Device	Group that follows the activation of the inputs programmed as "Stop extinction External".	4.19 "Monitoring of the status of components"	
9	Disab. Man. Extinc.	Group that activates in the event of the disabling of automatic activation (e.g. two alarms in a specific zone) of extinction	4.19 "Monitoring of the status of components"	
10	Extinction Fault	Group that is activated in the event of a fault on any component of the system with extinction functions (an extinction input or an output set as "Fire Protection System").		
11	Activate Extinc.	Group whose activation starts the automatic pre-extinction time count.		

EN12094-1: The previous groups can be associated with supervised outputs connected to other devices, internal or external to the fire extinguishing system, thus creating options 4.24 "Triggering signals to equipment within the system" and 4.26 "Triggering of the equipment outside the system" of standard EN 12094-1.

3.11 Setting the date and time

Proceed with the time and date setting by selecting the time and date pane in the lower-right corner of the start page [B] and, after entering an access code, set the individual fields using the scroll arrows.

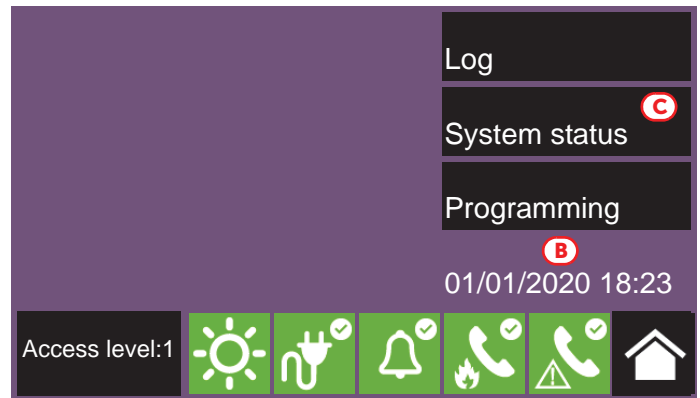


3.12 Firmware revision

The installer of the Previdia Compact system may access the firmware revision of each control panel module in order to facilitate any updating or configuration procedure.

The **System status** button on the home page in stand-by [C] accesses a section where you can view the status of the various system components.

Pressing the **Revision** button visualizes the following information:

- Firmware revision of the CPU unit (UI)
- Firmware revision of the I/O unit (IO)
- Minimum revision required for the configuration software (SW)
- Revision of the technical data viewing configuration data, that is the progressive number of system configuration upgrades
- Serial number of the control panel (SN)
- Control panel MAC address

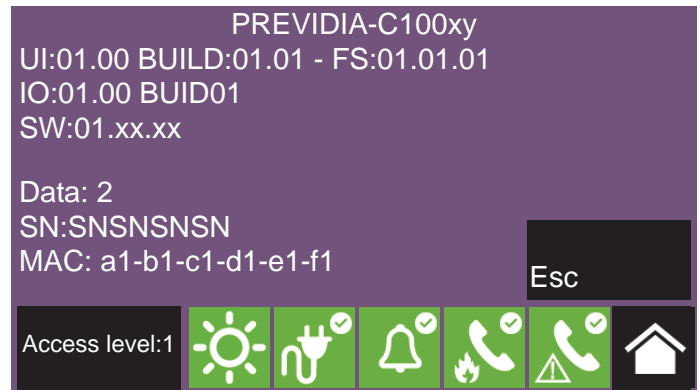

Parameters of devices and their groupings

The configuration of the devices connected to the loops and the output/input terminals of the Previdia Compact control panel takes into consideration both the setting of parameters, which vary depending on whether the device is an input or output device, as well as their grouping (zones for the points and output groups for the outputs).

These operations can be carried out in two ways:

- via the **"Configuration"** menu (paragraph 2.3), by selecting the section relative to the type of connection with the control panel (loop or "I/O") and accessing the programming sections until you select the device concerned
- via the **"Modify"** menu (paragraph 2.4), for the direct programming of the devices.
From this menu you can also program the logical groupings (zones and output groups)

4.1 Loop point parameters

The parameters of each device connected to one of the two loops are only available after an enrolling operation which allows the control panel to have a basic loop configuration (paragraph 3.5.1).

At this point the parameters of the enrolled points can be reached in two ways:


- through the **"Configuration"** menu, by selecting the section relative to one of the two loops and pressing **Auto-configure**, **Add/Change** to access a list of the loop points. Selecting a loop point enables the **Program** button.
- through the **"Modify"** menu and by pressing the **Point** button.
The screen will show the two control-panel loops and their statuses.
Selecting a loop enables the **Program** button for the parameter settings of the single loop (refer to paragraph 3.5.3 *Loop Parameters*), and the **View** button for access to the assigned points. This button allows you to view a list of all the devices on the loop and their statuses.
Selecting a loop device enables the **Program** button for the parameter settings, and the **Copy on...** button to copy the settings of the selected point (refer to paragraph 4.5).



The **Program** button allows you to access the programming menu which differs depending on the type of device (an input or output):

• General settings

- **Description**, label that identifies the individual point and which is shown in the events it is involved in.
- **Zone**, geographic group the point belongs to
- **LED blinking**, option that enables blinking on the device LED and its remote LED.
- **Domestic hush**, option that enables the following functions:
 - If an input is activated when the zone it belongs to is in stand-by status, the control panel will disable smoke detection in the partition for 10 minutes.
 - If an input is activated when the zone it belongs to is in a pre-alarm status triggered by smoke detection, the zone will return to stand-by and its smoke detection capabilities will be disabled for 2 minutes (up to a maximum of 3 times).

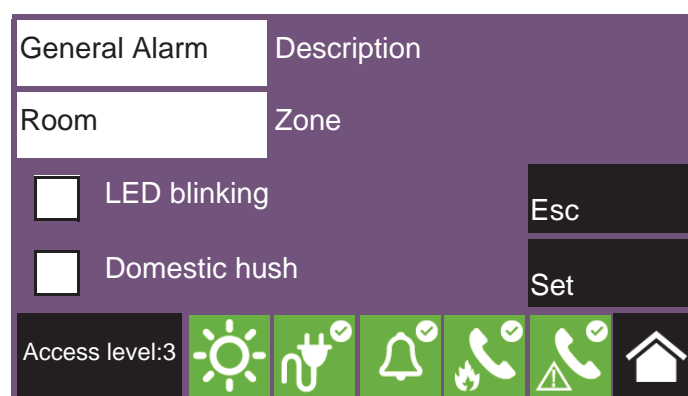


Note:

The "Domestic hush" function does not comply with the EN 54-2 standard.


• **Input parameters**

- **Mode**, determines the type of event generated by activation of the input.
- **Group activated**, indicates the group that will activate following input activation.
- **Pre-alarm**, determines when activation of the input will start the associated pre-alarm time. The possible values are: "Never", "In day mode" and "Always".
- **Resettable**, where present, if activated, the event generated by the activation of the input will reset when the terminal resets.
- **Verify alarm**, if selected, an algorithm will be applied to avoid false alarms generated by the detector.

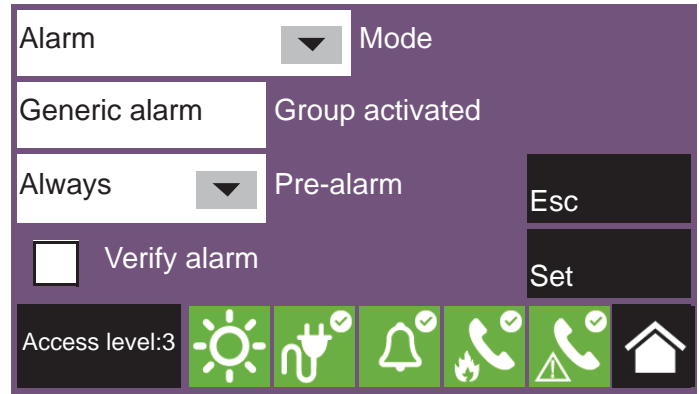

• **Output parameters**

- **Type**, determines the way in which the output will be conditioned by bypass and silence operations by type
- **Group activating the output**, group whose activation determines the activation of the output
- **Silenceable**, if selected, once the output is activated it can be deactivated by silencing the control panel
- **Follow Input**, if selected, the "R" of the detector will follow the activation of the input
- **Pattern**, pressing this button accesses the successive screen, which allows you to set the activation pattern for each output status. The available output statuses are "Stand-by", "Warning", "Pre-alarm" and "Alarm".

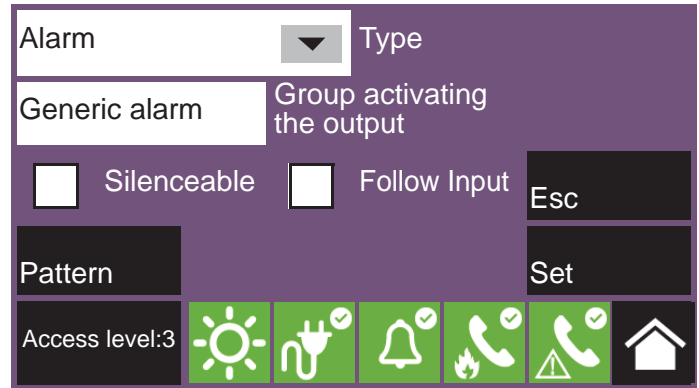

4.2 Parameters of control panel terminals

It is possible to set the parameters of an "I/O" terminal only after the line has been configured and the type of device connected to it specified (paragraph 3.7). The programming of the parameters varies according to the specified choice.

The parameters of each device connected to the terminals on-board the control panel (I/O lines and relays) can be reached in two ways:


- **via the "Configuration menu"**, selecting the section relative to the terminal shows the section with the list of terminals.
- **via the "Modify" menu** and pressing the **I/O Lines** button. Two pages will be displayed, navigable with the arrow keys, with a list of all the configured devices and their statuses.



The **Program** button is available for each terminal and allows access to the input/output programming menu:


• **General settings**

- **Description**, label that identifies the individual point and which is shown in the events it is involved in.
- **Zone**, geographic group the point belongs to
- **Use Zone Group**, if this box is selected, the point in question will be assigned to the default group associated with the zone selected at the previous step (if this is already the assigned group, the box will be selected automatically when this screen is displayed)

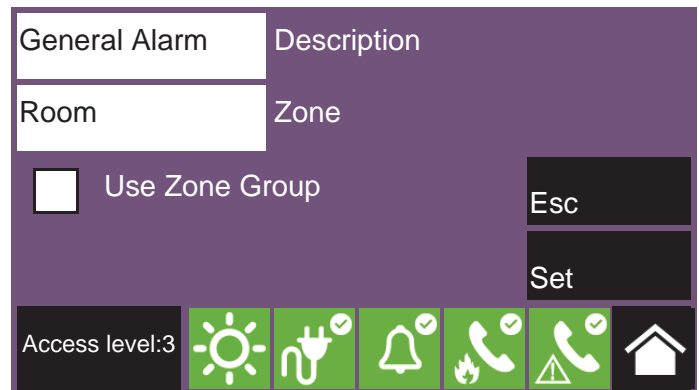

• **Input parameters**

- **Mode**, determines the type of event generated by activation of the input.
- **Group activated**, indicates the group that will activate following input activation.
- **Pre-alarm**, determines when activation of the input will start the associated pre-alarm time. The possible values are: "Never", "In day mode" and "Always".
- **Resettable**, where present, if activated, the event generated by the activation of the input will reset when the terminal resets.

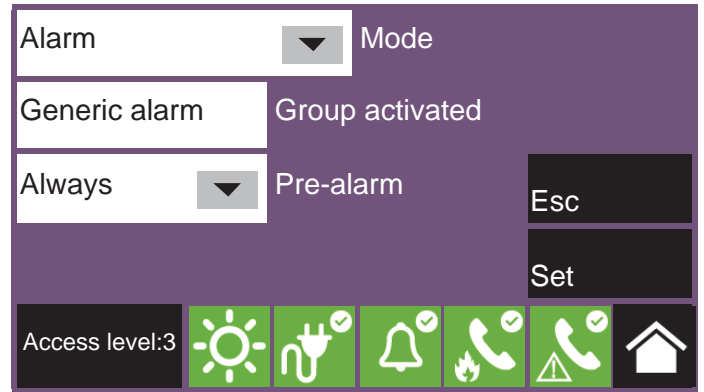


EN54:

If the activated group is associated with the "Silence" action, the activation of the input must be protected by appropriate means (for example a key) to restrict access to level 2.

• **Output parameters**

- **Type**, determines the way in which the output will be conditioned by bypass and silence operations by type
- **Group activating the output**, group whose activation determines the activation of the output
- **Silenceable**, if selected, once the output is activated it can be deactivated by silencing the control panel
- **Inverted**, if selected, it reverses the activation of the output
- **Pattern**, pressing this button accesses the successive screen, which allows you to set the activation pattern for each output status. The available output statuses are "Stand-by", "Warning", "Pre-alarm" and "Alarm".

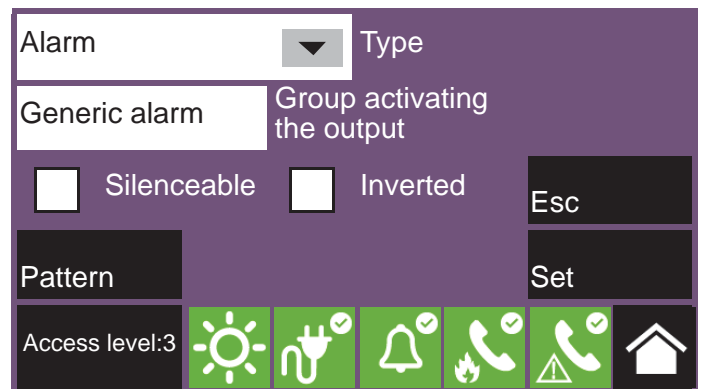


4.3 Zone parameters

Pressing the **Zone** button in the device parameter settings menu accesses the list of all the control panel zones and their statuses.

Selecting a zone enables the **Program** button to set the parameters, and the **Copy on...** button to copy the settings of the selected zone (refer to *paragraph 4.5 Replicate programming procedure*).

The parameters available for programming the zone are:

- **Description** of the zone
- **Pre-alarm (sec)**, length of pre-alarm signal for the zone, in seconds. The zone will trigger an alarm when the set time expires.
- **Investigation (sec)**, length of investigation time, in seconds. Activation of the investigation command during a pre-alarm, interrupts pre-alarm time and starts the investigation time.
- **Direct alarm on second pre-alarm**, option that, if activated, generates an alarm signal as soon as two detectors, regardless of the zone they belong to, go into pre-alarm status. Otherwise the alarm condition will activate at the end of the first pre-alarm time.
- **Alarm on second device only**, option that, if activated, will activate an alarm signal only after two detectors belonging to the zone have activated. The first detector will generate a pre-alarm signal with no time count.

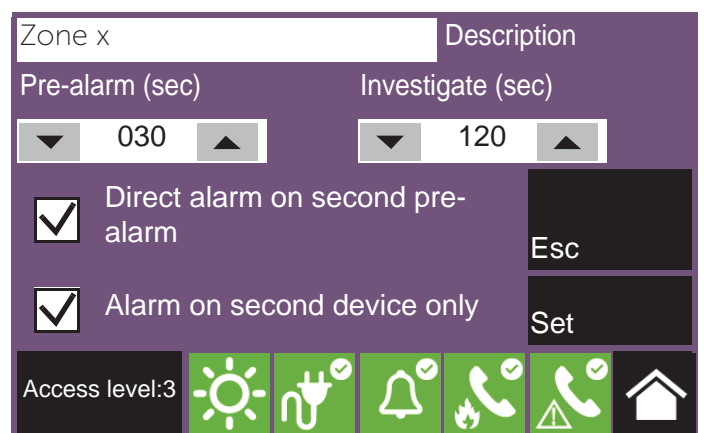

4.4 Output group parameters

Pressing the **Group** button on the device parameter settings menu accesses the list of all the output groups and their statuses.

Selecting a group enables the **Program** button to set the parameters, and the **Copy on...** button to copy the settings of the selected group (refer to *paragraph 4.5 Replicate programming procedure*).

The parameters available for programming the group are:

- **Description** of the group
- **Delay (sec)**, duration of the delay (in seconds) before activation of the outputs belonging to the group after the activation of the group itself
- **Pulse**, option that determines that pulse signals will activate the group of outputs (once the group has been activated, the outputs associated with it will remain active for the specified time and then return to the stand-by status).
If activated, you must specify the duration of the pulse activation signal (in the box at the bottom)

4.5 Replicate programming procedure

The Previdia Compact control panel allows you to copy the programming of a single element (point, zone, group) and replicate it on other elements in its category and group.

Accessing the screen of the group of elements undergoing programming (in index order) and selecting one of them enables the **Program** button to modify the parameters, and the **Copy on...** button to copy the programming.

No.	Zone	Status
1	Zone 1	Stand-by
2	Zone 2	Stand-by
3	Zone 3	Stand-by
4	Zone 4	Stand-by
5	Zone 5	Stand-by
6	Zone 6	Stand-by

Program Copy on... ◀ ▶ Esc

Access level:3 [Sun] [Plug] [Bell] [Fire] [Telephone] [Home]

The **Copy on...** button opens a window that provides three options:

- **Single item**, if activated, the programming will be replicated on the element with the index indicated in the box next to it.
- **Range**, if activated the programming will be replicated on the elements whose indexes belong to the interval indicated in the boxes at the side.
- **All**, if activated the programming will be replicated in all the elements of the same group of which the selected element is part

Single element 0002 Index

Range From A

All 0001 0002

Esc Set

Following the selection of one of these options and after pressing the **Set** button, all copied settings, except the description, will be applied to the programming of the desired elements.

Commissioning

The commissioning phase is a set of tests and inspections which are necessary to ensure the full efficiency and proper functioning of the system as specified in the system project provisions. This phase is essential and must be performed in a scrupulous manner in accordance with the regulatory requirements of the country where the system is installed and in full respect of the recommendations in the following section.

Ensure the test and inspection procedures are performed only after checking the safety of the system and after having verified that any device activations controlled by the system will not cause any conditions of danger, and that all the building occupants who can be reached by the audible and visual signalling have been informed.

Ensure that the person who is responsible for the security of the building where the tests and inspections are to be carried out has taken countermeasures to avoid any situations of panic or distress for the building occupants.

5.1 Testing the Control panel

It is necessary to check the functionality status of the front plate by first checking the information supplied on the screen and LEDs and then by inspecting the efficiency of the command devices (user-interface buttons, access keys, etc.):

- Check the functionality status of the screen and ensure that the information provided is clear.
- Ensure that the descriptions of the various zones, points and system elements entered during the data-entry phase are correct, and that the information provided on the screen clearly indicates any detectable conditions of danger.
- Check that there are no indications present of faults, alarms or anomalies of any type whatsoever. In the event of such indications, proceed with the removal of the causes of faults and anomalies.
- Check the status the functionality of the LEDs and buzzer. The front panel provides a button for the simultaneous activation of all the LEDs and buzzer thus allowing evaluation of their efficiency (refer to the description of the User Interface).
- Check the efficiency of the front-plate buttons and keys.
- Check the status of the power-supply sources (mains and batteries) and the consumption conditions of the control panel.

For control of the power-supply parameters you can:

- access the configuration menu (refer to *paragraph 2.3*) and touch the appropriate icon on the configuration screen of the control panel.
- tap on the power grid icon on the status bar



The sections show the voltages, currents and temperatures of the various elements:

[A]	Internal temperature and battery charge voltages	
[B]	Section containing a list of current faults	
[C]	Battery parameters (internal resistance, voltage, status and current)	
[D]	Voltage and output current of the power supply	
[E]	Button, available only for Access Level 3 (installer), allows immediate battery tests (which normally runs every 10 minutes)	

5.2 Testing to detectors and manual activations

All the installed detectors must be tested during the commissioning phase. It is necessary to check the capacity of each detector to react to a simulated condition of fire, and to check the precision of the signals transmitted to the control panel in response to its activation (description of the point and zone).

For this purpose it is possible to use the **Test** function provided by the control panel ([E]), in the "Zone" section, accessible via the "System status" menu on the homepage (paragraph 2.1).

By tapping this button it is possible to place one or more zones in test status. The activation of a detector which belongs to a zone in test status will not generate any alarm signalling or activate the outputs or signalling devices. However, the control panel will activate the signalling LEDs on the detectors and will perform automatic reset after a few seconds without any need of further intervention by the operator on the control panel.

The activation of a point which belongs to a zone in test status will be recorded in the events log. Therefore, on completion of the test on all the zone devices, the operator can check the congruence of the various indications by means of the log.

The activation of all the manual call points (alarm buttons) must be tested in the same way as described for the detectors.

No.	Zone	Status
1	Zone 1	Stand-by
2	Zone 2	Stand-by
3	Zone 3	Stand-by
4	Zone 4	Stand-by
5	Zone 5	Stand-by
6	Zone 6	Stand-by

Disable
Test E
◀ ▶
Esc

Access level:3

5.3 Testing signalling and activations

The functionality and efficiency of all the signalling devices must be checked thoroughly.

It is possible to test such devices by activating the relative LEDs and outputs manually from the control panel via the respective management page.

To reach this page you must access the "Points" section via the "System status" menu on the homepage (paragraph 2.1 First startup). By selecting the loop and point to be tested and then pressing the relative **View** buttons, you can reach the respective management page where you will find the **Actions** button [F]. This button activates other buttons, amongst those for the test functions are:

- Turn On output
- Turn On LED

Input module x
Zone y
Loop: z - Point: x - SN:012345678

Info

Info

Real-time

Actions F

Esc

Access level:3

Note: *Testing devices by means of manual activation does not test functionality and efficiency of the cause/effect association which determines their activation (programming coherence of groups), therefore, it is necessary to perform real functionality tests.*

5.4 Extinction system test

Particular attention must be paid to the testing of eventual fire extinction systems.

Special attention must be paid to the functionality and safety of the extinguishing-agent release devices before proceeding with the testing of all activation and stop-extinction procedures in accordance with the requirements of the executive project.

Maintenance

For proper and efficient management of the system it is necessary to carry out periodic maintenance in accordance with the regulatory requirements of the country where the system is installed and in full respect of the recommendations contained in this section.

For the frequency of the maintenance operations it is necessary to adhere to the applicable regulations. However, the manufacturer recommends that tests are performed on each point, component and element of the system at least once a year.

6.1 Testing the control panel

Work through the steps for control-panel test procedure as described in the commissioning section (*paragraph 5.1 Testing the Control panel*).

Additionally, consult the events log and check for the presence of fault or alarm conditions which must be investigated.

6.2 Testing the detectors

As well as the tests which must be performed during the commissioning phase (*paragraph 5.2 Testing to detectors and manual activations*), it is also necessary to check the contamination level in smoke detectors.

The management and configuration software provides a loop diagnostic function which allows you to gather the contamination values of the various devices in such a way to decide when cleaning is necessary.

Refer to the Programming manual for details regarding the diagnostic function and the detector manual for the instructions regarding cleaning operations.

6.3 Manual activation test

Work through the same tests as recommended in the commissioning section (*paragraph 5.2 Testing to detectors and manual activations*).

6.4 Testing signalling and activations

Work through the same tests as indicated in the commissioning section (*paragraph 5.3 Testing signalling and activations*).

6.5 Testing the extinction system

Work through the same tests as recommended in the commissioning section (*paragraph 5.4 Extinction system test*).



ISO 9001 Quality Management
certified by BSI with certificate number FM530352

Centobuchi, via Dei Lavoratori 10
63076 Montepredone (AP) Italy
Tel. +39 0735 705007 _ Fax +39 0735 704912

info@inim.biz _ www.inim.biz



DCMCINEOPREVIDIAC-120-20200115